

# APAE

## Indice de Circuitos de AUDIO

(A la fecha: 19-02-2001)

MARCA	MODELO	EQUIPMCODE	UBICACION
ACHE	SK74		MHA5,P18
ACHE	BERMUDA		MHA5,P14
ACHE	MEDITERRANEO		MHA5,P9
ACHE	SUPERCAR 62		MHA5,P10
ACHE	SUPERCAR 63		MHA5,P11
ACHE	SUPERCAR 73		MHA5,P12
ACHE	SUPERCAR 846V		MHA5,P21
ACHE	SUPERCAR 8412V		MHA5,P13
ACHE	SK70		MHA5,P17
ACHE	AR80		MHA5,P16
ACHE	SK84		MHA5,P19
ACHE	SK8412V		MHA5,P20
ACHE	AR60		MHA5,P15
ACOUSTECH	SR30LSUP2	RG ST	MHA1,P10
ACOUSTECH	ST3500	RG ST	MHA3,P18
ACOUSTECH	SR3030	RG ST/DD/EC	MHA4,P12
ACOUSTECH	SR3020	RG ST/DD	MHA2,P8
ACOUSTECH	SR2030L	RG ST/DD	MHA3,P16
ACOUSTECH	SR2020	RG ST/DD	MHA2,P12
ACOUSTECH	ST3700	RG ST	MHA1,P7
ACOUSTECH	ST4500	RG ST	MHA3,P18
ACOUSTECH	ST4500L	RG ST	MHA3,P18
ACOUSTECH	ST4700L	RG ST	MHA1,P7
ACOUSTECH	ST4700	RG ST	MHA1,P7
ACOUSTECH	SR30/30L	RG ST	MHA2,P14
ACOUSTECH	SR50X	RG ST/DD	MHA1,P14
ACOUSTECH	SR50LX	RG ST/DD	MHA1,P14
ADMIRAL	231		MHA5,P22
ADMIRAL	Y2119		MHA5,P23
ADMIRAL	537		MHA5,P22
ADMIRAL	237		MHA5,P22
ADMIRAL	531		MHA5,P22
AIKIT	AM15W	AM.	CA01.01
AIKIT	AM25W	AM.	CA01.01
AIKIT	AM40W	AM.	CA01.01
AIKIT	AM50W	AM.	CA01.01
AIKIT	AM1/5W	AM.	CA01.01
AIWA	CT-FX929M YU	AS	CDR07
AIWA	CT-R428M	AS	CDR07
AIWA	CT-R419M	AS	CDR07
AIWA	CT-R418 YZ	AS	CDR07
AIWA	CX-ZKDX7	AS	CDR08
AIWA	CT-R408 YV	AS	CDR07
AIWA	CT-FX928M YHJ	AS	CDR07
AIWA	CT-FX729M YU	AS	CDR07
AIWA	CT-FX728M YHJ	AS	CDR07
AIWA	CT-FX719 YU	AS	CDR07
AIWA	CT-FX7029M	AS	CDR08
AIWA	CT-FX7019	AS	CDR08
AIWA	CT-FR729M	AS	CDR08
AIWA	CT-FR720M	AS	CDR08
AIWA	CT-FR709	AS	CDR08
AIWA	CT-R409M	AS	CDR07
AIWA	CT-X319 YZST	AS	CDR07
AIWA	CT-Z109	AS	CDR07
AIWA	CT-X459 YJST	AS	CDR07
AIWA	CT-X458 YJ	AS	CDR07
AIWA	CT-X429M	AS	CDR07
AIWA	CT-X428M YH,YZ	AS	CDR07
AIWA	CT-X419 YUST	AS	CDR07
AIWA	CT-X418 YZ,YV	AS	CDR07
AIWA	CT-X409 YUST	AS	CDR08
AIWA	Z600	CM,CD,DD	CA19.07
AIWA	CT-X4019	AS	CDR08
AIWA	CT-Z159	AS	CDR07
AIWA	CT-X309 YZ1ST	AS	CDR07

**Indice de AUDIO**

AIWA	CT-X258 YJ	AS	CDR07
AIWA	CT-X218 YZ,YV	AS	CDR07
AIWA	CT-X208 YZ,YV	AS	CDR07
AIWA	CT-RF929M	AS	CDR07
AIWA	CT-R429M	AS	CDR07
AIWA	CDC-X407	AS	CDR08
AIWA	CX-ZKD77	AS	CDR08
AIWA	CT-FR706	AS	CDR08
AIWA	CT-X4059	AS	CDR08
AIWA	ADC-EX66	AS	CDR07
AIWA	CDC-R176M	AS	CDR07
AIWA	CDC-R146	AS	CDR07
AIWA	CDC-R136	AS	CDR07
AIWA	CDC-136	AS	CDR07
AIWA	CDC-106	AS	CDR07
AIWA	ADC-M65	AS	CDR08
AIWA	ADC-M60 YU	AS	CDR07
AIWA	CDC-X507M	AS	CDR07
AIWA	ADC-FM100	AS	CDR08
AIWA	CDC-X136 YU	AS	CDR07
AIWA	ADC-EX108	AS	CDR08
AIWA	ADC-EX106 YU	AS	CDR07
AIWA	TS-W45	ACTIVE SPEAKER	CDR07
AIWA	SC-UC78	ACTIVE SPEAKER	CDR07
AIWA	CSD-SR545 LH/HA/HR	RG	CA40.11
AIWA	CX-NV700		CA26.07
AIWA	CT-X615M	AS	CA26.09
AIWA	ADC-FM106 YL	AS	CDR07
AIWA	CDC-X1765M YL	AS	CDR07
AIWA	CDC-Z106 YU	AS	CDR08
AIWA	CDC-X707M	AS	CDR07
AIWA	CDC-X7070M	AS	CDR07
AIWA	CX-ZL10 U	CD	CDR07
AIWA	CDC-X477M	AS	CDR07
AIWA	CZ-1	CD	CDR07
AIWA	CDC-X307	AS	CDR08
AIWA	CDC-X116 YU	AS	CDR07
AIWA	CDC-X176M YU	AS	CDR07
AIWA	CDC-X126	AS	CDR07
AIWA	CDC-X175M YZ	AS	CDR07
AIWA	CDC-X1750M YU	AS	CDR07
AIWA	CDC-X155M YL	AS	CDR07
AIWA	CDC-X146M YU	AS	CDR07
AIWA	CDC-X1460M Y	AS	CDR07
AIWA	CDC-X1400 YL	AS	CDR07
AIWA	CDC-X1360 YL	AS	CDR07
AIWA	CDC-Z107	AS	CDR08
AIWA	CDC-X207	AS	CDR08
AIWA	LV-X880G	LD	CA22.05
AIWA	NSX-A115	CM	CDR07
AIWA	NSX-D9	CM	CDR07
AIWA	NSX-D77	CM	CDR07
AIWA	NSX-D7	CM	CDR07
AIWA	NSX-AV9T	CM	CDR07
AIWA	NSX-AV840	CM	CDR08
AIWA	NSX-AV720	CM	CDR07
AIWA	NSX-AV540	CM	CDR08
AIWA	NSX-F780	CM	CDR07
AIWA	NSX-AV240	CM	CDR08
AIWA	NSX-F959	CM	CDR07
AIWA	NSX-AJ70	CM	CDR07
AIWA	NSX-A999	CM	CDR07
AIWA	NSX-A888	CM	CDR07
AIWA	NSX-A777	CM	CDR07
AIWA	NSX-A767	CM	CDR07
AIWA	NSX-A555	CM	CDR08
AIWA	NSX-A508	CM	CDR07
AIWA	NSX-A223	CM	CDR07
AIWA	RF-M55 YU,YZ	AS	CDR07
AIWA	NSX-AV520	CM	CDR07
AIWA	NSX-K580	CM	CDR08
AIWA	NSX-MT520	CM	CDR07
AIWA	NSX-MT241	CM	CDR07

**Indice de AUDIO**

AIWA	NSX-MA945	CM	CDR08
AIWA	NSX-MA845	CM	CDR08
AIWA	NSX-MA645	CM	CDR08
AIWA	NSX-MA545	CM	CDR07
AIWA	NSX-KT9	CM	CDR07
AIWA	NSX-KT10	CM	CDR08
AIWA	NSX-DS15	CM	CDR08
AIWA	NSX-K880	CM	CDR08
AIWA	NSX-A111	CM	CDR07
AIWA	NSX-K386	CM	CDR08
AIWA	TP728	G	CA05.
AIWA	TP726	G	CA05.
AIWA	TP718	APS	CA01.02
AIWA	NSX-D707	CM,CD,DD	CA22.02
AIWA	TP705	GCA	CA05.
AIWA	NSX-K380	CM	CDR07
AIWA	NSX-K180	CM	CDR08
AIWA	NSX-HM456	CM	CDR07
AIWA	NSX-K980	CM	CDR08
AIWA	CA-D240 HE/EZ	CM	CDR07
AIWA	NSX-A222	CM	CDR08
AIWA	CA-W54MK2V	CM	CDR08
AIWA	CA-DW935M	CM	CDR08
AIWA	CA-DW735M	CM	CDR08
AIWA	CA-DW635	CM	CDR07
AIWA	CA-DW535	CM	CDR08
AIWA	CA-DW345	CM	CDR07
AIWA	CA-DW245	CM	CDR08
AIWA	CA-WR58MK2	CM	CDR08
AIWA	CA-DW235	CM	CDR07
AIWA	CA-WR88	CM	CDR07
AIWA	AM-LM99	CM	CDR08
AIWA	AM-HX50	CM	CDR08
AIWA	6ZG-1S S2 S3	CD MECANISMOS	CDR07
AIWA	6ZG-1	CD MECANISMOS	CDR07
AIWA	4ZG-1 Z4	CD MECANISMOS	CDR07
AIWA	4ZG-1 Z3/Z4	CD MECANISMOS	CDR07
AIWA	4ZG-1 VOS1	CD MECANISMOS	CDR07
AIWA	4ZG-1 S3	CD MECANISMOS	CDR07
AIWA	4ZG-1	CD MECANISMOS	CDR07
AIWA	CA-DW240	CM	CDR07
AIWA	CSD-ES777	CM	CDR08
AIWA	NSX-226	CM	CDR07
AIWA	CS-WR630	CM	CDR08
AIWA	CS-P89	CM	CDR08
AIWA	CS-P77	CM	CDR08
AIWA	CS-P55W/AU	CM	CDR08
AIWA	CS-P55W/AU	CM	CDR08
AIWA	CSD-RD370	CM	CDR08
AIWA	CSD-MD50	CM	CDR08
AIWA	CA-W82	CM	CDR07
AIWA	CSD-ES977	CM	CDR08
AIWA	Z-M2500	CM	CA40.01
AIWA	CSD-ES27	CM	CDR08
AIWA	CSD-ES216	CM	CDR08
AIWA	CSD-EL55	CM	CDR08
AIWA	CSD-EL33	CM	CDR08
AIWA	CSD-ED90	CM	CDR08
AIWA	CSD-ED79	CM	CDR08
AIWA	CSD-ED27	CM	CDR08
AIWA	CS-131	CM	CDR08
AIWA	CS-130	CM	CDR08
AIWA	CSD-EU2000	CM	CDR08
AIWA	NSX-MT75	CM,CD,DD	CA24.02
AIWA	NSX-A51	CM,CD,DD	CA23.09
AIWA	NSX-S52	CM,CD,DD	CA23.09
AIWA	NSX-A54	CM,CD,DD	CA23.09
AIWA	CT-X55	AS	CA21.10
AIWA	CX57	CD/DD/SI DI C/CR	MHA8,P43
AIWA	CX-Z58	CM,CD,DD	CA14.06
AIWA	NSX-MT70	CM,CD,DD	CA24.02
AIWA	TPR101C/E		MHA5,P31
AIWA	CT-R75M	AS	CA21.08

**Indice de AUDIO**

AIWA	NSX-A50	CM,CD,DD	CA23.09
AIWA	XS-Z82M	CM,CD,DD	CA20.10
AIWA	NSX-AV85	CM,CD,DD	CA24.01
AIWA	NSX-AVH90	CM,CD,DD	CA24.01
AIWA	NSX-A92	CM,CD,DD	CA12.01
AIWA	NSX-A92	MC/CD/AM-FM/AM/D	CA12.01
AIWA	CT-R95M	AS	CA21.08
AIWA	HD-S100	WM	CA20.12
AIWA	LV-X550G	LD	CA22.05
AIWA	NSX-V70	CM	CA24.02
AIWA	RM-21	RG	CA19.01
AIWA	DX-D10	CM,CD,DD	CA22.04
AIWA	FX-W10	CM,CD,DD	CA22.04
AIWA	MX-D10	CM,CD,DD	CA22.04
AIWA	NSX-D909	CM/CD/DD	CA12.02
AIWA	TPR906H,E,K	RG ST 4 BANDAS	MEA1,P76
AIWA	TPR901H		MHA5,P392
AIWA	TPR901H	RG ST 4 BANDAS	MEA1,P70
AIWA	CX-NV900		CA26.06
AIWA	Z50585	CM,CD,DD	CA05
AIWA	NSX-V20	CM,DD,CD,SI	CA24.05
AIWA	TP50R	GCA	CA05.
AIWA	XP-C30	DM	CA21.05
AIWA	CT-X35	AS	CA21.10
AIWA	NSX-F99		CA32.01
AIWA	NSX-F98		CA32.01
AIWA	NSX-F9		CA32.01
AIWA	NSX-F15		CA32.01
AIWA	NSX-F12		CA32.01
AIWA	TPR101H		MHA5,P30
AIWA	TX-D10	CM,CD,DD	CA22.04
AIWA	DX-N351M	CD	CA21.02
AIWA	TRP250H	RG 5 BANDAS	MEA1,P47
AIWA	AV-X300		CA25.08
AIWA	TPR300A,H,C,G,F	RG 4 BANDAS	MEA1,P58
AIWA	TPR300AH/AC/AG		MHA5,P44
AIWA	CSD-XW305	CM	CA21.07
AIWA	NSX330	CM, CD, DD	CA12.01
AIWA	NSX330	CM/CD/AM-FM/AM/D	CA12.01
AIWA	TPR101V		MHA5,P24
AIWA	DX-N350M	CD	CA21.02
AIWA	KS-RT220AS	AS	CA31.08
AIWA	DX-N352M	CD	CA21.02
AIWA	HS-JS415VM		CA01
AIWA	NSX430	CM,CD,DD	CA05
AIWA	HS-J470	WM	CA21.04
AIWA	CA-B500	CD/DD/CO RA/EC	MHA8,P14
AIWA	CA-DW500	CD/DD/CO RA/EC	MHA8,P14
AIWA	LV-X500	LD	CA20.08
AIWA	NSX500	CD	CA11.03
AIWA	NSX340	CM,CD,DD	CA05
AIWA	CT-X156	AS	CA26.08
AIWA	TPR101	E/H/V/C	CA07.
AIWA	TPR102H		MHA5,P26
AIWA	TPR102SLH		MHA5,P25
AIWA	TPR102SSH		MHA5,P27
AIWA	TPR102C		MHA5,P28
AIWA	CT-X106		CA26.08
AIWA	TPR132H/C/G/F		MHA5,P41
AIWA	TPR132/145H,C,G,F,T	RG MULTIBANDA	MEA1,P15
AIWA	TPR250H		MHA5,P36
AIWA	TPR145H/C/G/F		MHA5,P41
AIWA	NSX220	CM,CD,DD	CA10.08
AIWA	NSX-V200		CA26.04
AIWA	TPR200H	RG 4 BANDAS	MEA1,P30
AIWA	TRP200H		MHA5,P46
AIWA	TPR201H/C		MHA5,P33
AIWA	TPR201V/E		MHA5,P32
AIWA	TPR201SSH		MHA5,P29
AIWA	TPR216H,SSH	RG MULTIBANDA	MEA1,P36
AIWA	LCX-9	RG,CD	CA20.02
AIWA	TPR140H,F	RG 3 BANDAS	MEA1,P23
AIWA	CX-NV9000		CA26.06

**Indice de AUDIO**

AIWA	TEORIA DE CD	CD	CA04.
AIWA	CT-X415	AS	CA26.11
AIWA	AM-F1	DM	CA19.03
AIWA	CSD-EX1	RG,CD	CA22.01
AIWA	NSX-D2	CD/DD/CO RA/SI DI	MHA7,P34
AIWA	NSX-D2	CM,CD,DD	CA21.06
AIWA	XG-D2	CD/DD/CO RA/SI DI	MHA7,P34
AIWA	CDC-X10	AS	CA26.10
AIWA	DXN3LH	=NSX 220	CA10.08
AIWA	TP741H/C/E/V	G	CA05.
AIWA	XK-S7000	DECK	CA22.03
AIWA	CX3500	CD	CA11.03
AIWA	CT-S2700	AS	CA22.06
AIWA	CT-S2610	AS	CA22.06
AIWA	CT-S2600	AS	CA22.06
AIWA	AP2200EE		CA09.12
AIWA	CTR2060Y-L		MEA4,P39
AIWA	CTR2050Y		MEA4,P36
AIWA	XG-D2	CM,CD,DD	CA21.06
AIWA	CSD-XW505	CM	CA21.07
AIWA	NSX-S505	CM	CA41.05
AIWA	NSX-A505	CM	CA41.05
AIWA	Z-550M	CM,CD,DD	CA21.03
AIWA	NSX520	CM,CD,DD	CA26.05
AIWA	XG500	CD	CA11.03
AIWA	Z-1800	CM	CA40.01
AIWA	NSX-A94/S90/S94/S95	CM	CA40.01
AIWA	NSX-380	CM	CA40.01
AIWA	TP737	G	CA05.
AIWA	LV-X505	LD	CA22.05
AIWA	TP739	G	CA05.
AIWA	TP736	G	CA05.
AIWA	NSX810	CD/DD/CO RA	CA10.03
AIWA	NSX800	CD/DD/CO RA	MHA7,P18
AIWA	NSX800	CD/DD/CO RA	CA10.03
AIWA	NSX-MT725	CM	CDR07
AIWA	LV-X800	LD	CA20.08
AIWA	NSX-AV320	CM	CDR07
AIWA	CTR2020E		MHA5,P54
AIWA	DX-Z9200M	CM	CA40.01
AIWA	TPR950AH		MHA5,P40
AIWA	CTR2040E		MEA4,P26
AIWA	NSX990	CM,CD,DD	CA11.04
AIWA	NSX990	CD	CA11.04
AIWA	NSX990	CD	CA04.
AIWA	DX-Z980M	CD	CA20.11
AIWA	TPR968H,HU	RG ST 4 BANDAS	MEA1,P113
AIWA	TPR968H/HU		MHA5,P50
AIWA	TPR955H,E,K,G	RG ST 4 BANDAS	MEA1,P105
AIWA	TPR990H,HU	RG ST 4 BANDAS	MEA1,P123
AIWA	TPR950H,G	RG ST 4 BANDAS	MEA1,P98
AIWA	TPR990H/HU		MHA5,P52
AIWA	TPR926H,E,K,G,HU	RG ST 4 BANDAS	MEA1,P91
AIWA	TPR926H/HU/E/K/G		MHA5,P48
AIWA	TPR920H,C	RG ST/OL/OC/FM	MEA1,P83
AIWA	TPR920H/C	RG ST/OL/OC/FM	C09.12
AIWA	TPR920H/C		MHA5,P38
AIWA	CA-DW8	CM,CD,DD	CA21.07
AIWA	TPR910H/C/G/HT		MHA5,P34
AIWA	NSX-S507	CM	CA41.05
AIWA	TPR955H/E/K/G		MHA5,P42
AIWA	TP1036		MEA4,P13
AIWA	NSX-AVH9	CM,CD,DD	CA24.01
AIWA	XD-S1100	CD	CA20.04
AIWA	CT1050E		MEA4,P14
AIWA	NSX-D3	CM/DD/EC/CD/SIDI C/R	MHA6,P12
AIWA	XP-3	DM	CA21.05
AIWA	NSX-D5	CM,CD,DD	CA05
AIWA	XP5	DM	CA19.04
AIWA	XP6	DM	CA19.04
AIWA	NSX990	CM,CD,DD	CA12.01
AIWA	XP7	DM	CA19.04
AIWA	CTR2030E,E1		MEA4,P19

**Indice de AUDIO**

AIWA	CT-X1015		CA26.08
AIWA	TP1004	G	CA05.
AIWA	CU-D1000	CM,CD,DD	CA22.04
AIWA	SX-N999	CM,CD,DD	CA11.11
AIWA	NSX999	CM,CD,DD	CA05.
AIWA	CX-N999	CM,CD,DD	CA11.11
AIWA	NSX992	CD	CA11.04
AIWA	XG990	CD	CA11.04
AIWA	CLX-7	CM,CD,DD	CA21.09
AIWA	AM-F70 AU	MINI DISC	CDR07
AIWA	NSX-AK772	CM	CDR07
AIWA	HS-TA203	WM - M.DE SERVICE	CDR07
AIWA	AM-HX30 AEZ,AK	MINI DISC	CDR07
AIWA	AM-F80	MINI DISC	CDR08
AIWA	HS-TA204	WM - M.DE SERVICE	CDR07
AIWA	HS-TA283	WM - M.DE SERVICE	CDR07
AIWA	AM-HX30 AHK,AHR	MINI DISC	CDR07
AIWA	AM-F70 D	MINI DISC	CDR07
AIWA	HS-TA183	WM - M.DE SERVICE	CDR07
AIWA	AM-F70 AHC	MINI DISC	CDR07
AIWA	AM-F70 AEZ,AK	MINI DISC	CDR07
AIWA	AM-F65 AEZ,AK	MINI DISC	CDR07
AIWA	AM-F05 AHE	MINI DISC	CDR07
AIWA	LCX-K170	MINI COMP.	CDR07
AIWA	LCX-358 EZ	MINI COMP.	CDR07
AIWA	LCX-352 EZ	MINI COMP.	CDR07
AIWA	AM-F70 D2	MINI DISC	CDR07
AIWA	HS-RX837	WM - M.DE SERVICE	CDR07
AIWA	XP-V31 AEZ,AHC,AHR,ALH	DISCMAN	CDR08
AIWA	HS-RX108	WM - M.DE SERVICE	CDR07
AIWA	HS-RX208	WM - M.DE SERVICE	CDR07
AIWA	HS-RX308	WM - M.DE SERVICE	CDR07
AIWA	HS-RX408	WM - M.DE SERVICE	CDR07
AIWA	HS-RX490	WM - M.DE SERVICE	CDR08
AIWA	HS-TA193	WM - M.DE SERVICE	CDR07
AIWA	HS-RX695	WM - M.DE SERVICE	CDR08
AIWA	LCX-155 U	MINI COMP.	CDR07
AIWA	HS-SP170 /W	WM - M.DE SERVICE	CDR07
AIWA	HS-SP301	WM - M.DE SERVICE	CDR07
AIWA	AM-HX55	MINI DISC	CDR08
AIWA	HS-TA164	WM - M.DE SERVICE	CDR07
AIWA	AM-HX30 D	MINI DISC	CDR07
AIWA	AM-HX30 AU	MINI DISC	CDR07
AIWA	HS-TA166	WM - M.DE SERVICE	CDR08
AIWA	HS-RX693	WM - M.DE SERVICE	CDR08
AIWA	XP-V706C	DISCMAN	CDR07
AIWA	TP-VS480	GRABADOR	CDR07
AIWA	TP-S5	GRABADOR	CDR07
AIWA	TP-S3D	GRABADOR	CDR08
AIWA	TP-M920	GRABADOR	CDR07
AIWA	TP-M900	GRABADOR	CDR07
AIWA	TP-M131	GRABADOR	CDR08
AIWA	LCX-350 LH,K	MINI COMP.	CDR07
AIWA	XP-V74	DISCMAN	CDR08
AIWA	TR-35	GRABADOR	CDR08
AIWA	XP-V703	DISCMAN	CDR07
AIWA	XP-V53 AEZ,AK	DISCMAN	CDR07
AIWA	XP-V506C ALH,AU	DISCMAN	CDR07
AIWA	XP-V503J AU	DISCMAN	CDR07
AIWA	XP-V50 ALH,AU	DISCMAN	CDR07
AIWA	XP-V50 AEZ,AK	DISCMAN	CDR07
AIWA	XP-V32 AEZ	DISCMAN	CDR08
AIWA	TP-55	GRABADOR	CDR07
AIWA	LCX-133 EZ,K	MINI COMP.	CDR07
AIWA	AM-R10 D	MINI DISC	CDR07
AIWA	LCX-155 EZ,HR	MINI COMP.	CDR07
AIWA	LCX-150 EZ,K	MINI COMP.	CDR07
AIWA	HS-TA293	WM - M.DE SERVICE	CDR07
AIWA	HS-TA380	WM - M.DE SERVICE	CDR07
AIWA	HS-TA383	WM - M.DE SERVICE	CDR07
AIWA	HS-TA396	WM - M.DE SERVICE	CDR08
AIWA	TP-VS530	GRABADOR	CDR07

**Indice de AUDIO**

AIWA	LCX-133 LH	MINI COMP.	CDR07
AIWA	TP-VS610	GRABADOR	CDR07
AIWA	HS-TA493	WM - M.DE SERVICE	CDR08
AIWA	LCX-133 D	MINI COMP.	CDR07
AIWA	LCX-130 EZ,K	MINI COMP.	CDR07
AIWA	NC-3600P4	CD MECANISMO	CDR08
AIWA	AZG-5	CD MECANISMO	CDR08
AIWA	FR-T7	RADIO	CDR08
AIWA	LCX-350 D,HE,HR	MINI COMP.	CDR07
AIWA	HS-TA403	WM - M.DE SERVICE	CDR07
AIWA	Z-L60	MINICOMP	CDR08
AIWA	HS-RS220	WM - M.DE SERVICE	CDR07
AIWA	Z-L90	MINICOMP	CDR08
AIWA	FX-LM99	RADIO	CDR08
AIWA	HS-PX597	WM - M.DE SERVICE	CDR08
AIWA	HS-PX797	WM - M.DE SERVICE	CDR08
AIWA	HS-PX997	WM - M.DE SERVICE	CDR08
AIWA	FR-A200 EZ,UB,UBC	RA	CDR07
AIWA	Z-L70	MINICOMP	CDR08
AIWA	FR-A200 UB	RA	CDR07
AIWA	Z-L52	MINICOMP	CDR08
AIWA	Z-KDX9	MINICOMP	CDR08
AIWA	Z-HT83	MINICOMP	CDR08
AIWA	Z-HT73	MINICOMP	CDR08
AIWA	Z-HK85	MINICOMP	CDR08
AIWA	Z-HK75	MINICOMP	CDR08
AIWA	XR-MT1000	MINICOMP	CDR07
AIWA	Z-L80	MINICOMP	CDR08
AIWA	FR-A351	RADIO	CDR08
AIWA	FR-IC555	RADIO	CDR08
AIWA	FR-C53	RADIO	CDR07
AIWA	FR-C52	RADIO	CDR08
AIWA	FR-AQ505	RADIO	CDR08
AIWA	FR-A705	RADIO	CDR08
AIWA	FR-A506	RADIO	CDR08
AIWA	PX-E860	PHONO	CDR07
AIWA	FR-A47	RADIO	CDR08
AIWA	XR-MD90	MINICOMP	CDR07
AIWA	FR-A350	RADIO	CDR08
AIWA	HS-AP1MK7	RA	CDR07
AIWA	FR-C20 D	RA	CDR07
AIWA	FR-C151W	RA	CDR07
AIWA	FR-A255 U	RA	CDR07
AIWA	FR-A251	RA	CDR07
AIWA	FR-A250 U,LH,UB,UBH	RA	CDR07
AIWA	FR-A48	RADIO	CDR08
AIWA	XR-H1100	MINICOMP	CDR07
AIWA	XR-M11	MINICOMP	CDR08
AIWA	XR-M1000	MINICOMP	CDR07
AIWA	XR-H770MD	MINICOMP	CDR08
AIWA	XR-H66MD	MINICOMP	CDR07
AIWA	XR-H55MD	MINICOMP	CDR07
AIWA	XR-H360MD	MINICOMP	CDR07
AIWA	XR-MS3	MINICOMP	CDR07
AIWA	XR-H330MD	MINICOMP	CDR08
AIWA	XR-M25	MINICOMP	CDR07
AIWA	XR-H1000	MINICOMP	CDR07
AIWA	XR-AVH1200	MINICOMP	CDR08
AIWA	CX-NHMT75	MINICOMP	CDR07
AIWA	CR-LA10	MINI DISC	CDR08
AIWA	CR-IC90	MINI DISC	CDR08
AIWA	CR-DS700	MINI DISC	CDR08
AIWA	AM-ST40 AEZ,AHK,D	MINI DISC	CDR07
AIWA	XR-H33MD	MINICOMP	CDR07
AIWA	XR-M78	MINICOMP	CDR08
AIWA	TP-VS640	GRABADOR	CDR08
AIWA	XR-MD85	MINICOMP	CDR07
AIWA	XR-MD700	MINICOMP	CDR08
AIWA	XR-MD105	MINICOMP	CDR07
AIWA	XR-MD101	MINICOMP	CDR07
AIWA	XR-MD100	MINICOMP	CDR07
AIWA	XR-M99	MINICOMP	CDR08
AIWA	XR-M12	MINICOMP	CDR07

**Indice de AUDIO**

AIWA	XR-M88	MINICOMP	CDR08
AIWA	XR-M22	MINICOMP	CDR07
AIWA	XR-M77	MINICOMP	CDR08
AIWA	XR-M75	MINICOMP	CDR07
AIWA	XR-M70	MINICOMP	CDR07
AIWA	XR-M36	MINICOMP	CDR07
AIWA	XR-M34	MINICOMP	CDR07
AIWA	XR-M33	MINICOMP	CDR07
AIWA	XR-MK25	MINICOMP	CDR07
AIWA	XR-M89	MINICOMP	CDR08
AIWA	NSX-S888	CM	CDR08
AIWA	NSX-SZ50	CM	CDR07
AIWA	IC-M8	IC RECORDER	CDR07
AIWA	NSX-SZ27	CM	CDR07
AIWA	NSX-SZ20/E/J	CM	CDR07
AIWA	NSX-SV7	CM	CDR08
AIWA	NSX-S999	CM	CDR07
AIWA	XP-V30 Y1	DISCMAN	CDR08
AIWA	NSX-S898	CM	CDR07
AIWA	HS-TX494	WM - M.DE SERVICE	CDR08
AIWA	NSX-S787	CM	CDR07
AIWA	NSX-S779	CM	CDR07
AIWA	NSX-S778	CM	CDR08
AIWA	HS-TX406	WM - M.DE SERVICE	CDR07
AIWA	NSX-A30	CM/CD	CA42.01
AIWA	NSX-A31	CM/CD	CA42.01
AIWA	NSX-S777	CM	CDR08
AIWA	NSX-S989	CM	CDR07
AIWA	NSX-S33	CM/CD	CA42.01
AIWA	NSX-SZ30/E	CM	CDR07
AIWA	XP-V36	WM - M.DE SERVICE	CDR08
AIWA	XP-R210	WM - M.DE SERVICE	CDR07
AIWA	XP-R110	WM - M.DE SERVICE	CDR07
AIWA	XP-C506C	WM - M.DE SERVICE	CDR07
AIWA	XC-RW500	WM - M.DE SERVICE	CDR07
AIWA	HS-TX409	WM - M.DE SERVICE	CDR07
AIWA	HS-TX794	WM - M.DE SERVICE	CDR08
AIWA	NSX-S707	CM	CDR07
AIWA	HS-TX694	WM - M.DE SERVICE	CDR08
AIWA	HS-TX606	WM - M.DE SERVICE	CDR07
AIWA	HS-TX596	WM - M.DE SERVICE	CDR08
AIWA	HS-TX594	WM - M.DE SERVICE	CDR08
AIWA	HS-TX591	WM - M.DE SERVICE	CDR08
AIWA	HS-TX506	WM - M.DE SERVICE	CDR07
AIWA	HS-TX496	WM - M.DE SERVICE	CDR08
AIWA	IC-M60	WM - M.DE SERVICE	CDR07
AIWA	4ZG-1B		CA42.02
AIWA	NSX-S112	CM	CDR08
AIWA	NSX-S111	CM	CDR08
AIWA	NSX-MT9	CM	CDR07
AIWA	4ZG-1		CA43.03
AIWA	HS-TS300	WM - M.DE SERVICE	CDR07
AIWA	4ZG-1Z4		CA43.03
AIWA	NSX-S767	CM	CDR07
AIWA	4ZG-1Z		CA42.02
AIWA	NSX-S201	CM	CDR07
AIWA	4ZG-1A		CA42.02
AIWA	4ZG-1		CA42.02
AIWA	HS-TX394	WM - M.DE SERVICE	CDR07
AIWA	HS-TX396	WM - M.DE SERVICE	CDR07
AIWA	HS-TX399	WM - M.DE SERVICE	CDR07
AIWA	HS-TX401	WM - M.DE SERVICE	CDR07
AIWA	Z-R900		CA42.03
AIWA	4ZG-1Z3		CA43.03
AIWA	NSX-S303	CM	CDR07
AIWA	HS-TX796	WM - M.DE SERVICE	CDR08
AIWA	NSX-S559	CM	CDR08
AIWA	NSX-S556	CM	CDR08
AIWA	NSX-S555	CM	CDR08
AIWA	NSX-S508	CM	CDR07
AIWA	NSX-S505	CM	CDR07
AIWA	NSX-S333	CM	CDR08
AIWA	NSX-S116	CM	CDR08



**Indice de AUDIO**

AIWA	NSX-S307	CM	CDR07
AIWA	NSX-S16	CM	CDR08
AIWA	NSX-S229	CM	CDR07
AIWA	NSX-S223	CM	CDR07
AIWA	NSX-S222	CM	CDR07
AIWA	NSX-S205	CM	CDR07
AIWA	NSX-S203	CM	CDR07
AIWA	NSX-S202	CM	CDR07
AIWA	NSX-S708	CM	CDR07
AIWA	NSX-S308	CM	CDR07
AIWA	XP-GM2000 AEZ,AK	DISCMAN	CDR07
AIWA	XR-MD500	CM	CDR08
AIWA	XR-MD201	CM	CDR08
AIWA	XR-MD200	CM	CDR08
AIWA	XR-MD110	CM	CDR08
AIWA	XR-M57	CM	CDR08
AIWA	XR-M56	CM	CDR08
AIWA	XR-H560MD	CM	CDR08
AIWA	HS-TX696	WM - M.DE SERVICE	CDR08
AIWA	XR-WVH1550	CM	CDR08
AIWA	NSX-SZ70	CM	CDR07
AIWA	XP-K7 AHC,AHK,AHR	DISCMAN	CDR07
AIWA	XP-C55 ALH,AU	DISCMAN	CDR07
AIWA	XP-KM80 AHR	DISCMAN	CDR07
AIWA	XP-R970 AK,AEZ	DISCMAN	CDR07
AIWA	XR-M55	CM	CDR08
AIWA	XR-K363MD	CM	CDR08
AIWA	XP-C578 AHE,AHR	DISCMAN	CDR07
AIWA	Z-L50	CM	CDR07
AIWA	XP-577 AHE,AHR	DISCMAN	CDR07
AIWA	Z-VR88	CM	CDR07
AIWA	Z-VR55	CM	CDR07
AIWA	Z-R990	CM	CDR07
AIWA	Z-R550	CM	CDR07
AIWA	Z-R220	CM	CDR07
AIWA	Z-L900	CM	CDR07
AIWA	XR-MK29	CM	CDR08
AIWA	Z-L700	CM	CDR07
AIWA	XR-SV365MD	CM	CDR08
AIWA	XP-V37	WM - M.DE SERVICE	CDR08
AIWA	Z-L31	CM	CDR07
AIWA	Z-L30	CM	CDR07
AIWA	Z-L20	CM	CDR08
AIWA	Z-L10	CM	CDR07
AIWA	Z-HT33	CM	CDR07
AIWA	XP-R100 AH,AL,AU,AE,AK	DISCMAN	CDR07
AIWA	Z-L800	CM	CDR07
AIWA	NXS-336	CM	CDR07
AIWA	XG-S125	CM	CDR08
AIWA	XG-S111	CM	CDR08
AIWA	XG-E16	CM	CDR08
AIWA	XG-E15	CM	CDR08
AIWA	XG-128	CM	CDR07
AIWA	XG-126	CM	CDR07
AIWA	XG-125	CM	CDR07
AIWA	TP-M330	CM	CDR08
AIWA	TP-M230	CM	CDR08
AIWA	XP-KM12 AHEJ	DISCMAN	CDR07
AIWA	SC-130	CM	CDR08
AIWA	XG-S202	CM	CDR07
AIWA	XP-SP90 AU	DISCMAN	CDR07
AIWA	NSX-WK790	CM	CDR08
AIWA	NSX-WK590	CM	CDR07
AIWA	NSX-WK390	CM	CDR07
AIWA	NSX-T9	CM	CDR08
AIWA	NSX-T7	CM	CDR08
AIWA	NSX-SZ83	CM	CDR07
AIWA	NSX-SZ80/E	CM	CDR07
AIWA	NSX-SZ73	CM	CDR07
AIWA	TP-M130	CM	CDR07
AIWA	XG-S222	CM	CDR07
AIWA	XRH-238MD	CM	CDR08

**Indice de AUDIO**

AIWA	XRH-236MD	CM	CDR08
AIWA	XRH-235MD	CM	CDR08
AIWA	XRH-220MD	CM	CDR08
AIWA	XRH2200MD	CM	CDR08
AIWA	XP-V709CJ	CM	CDR08
AIWA	XP-V70	CM	CDR08
AIWA	XP-V516C	CM	CDR08
AIWA	XG-S126	CM	CDR08
AIWA	XP-V511	CM	CDR08
AIWA	XG-S128	CM	CDR08
AIWA	XG-S208	CM	CDR07
AIWA	XR-H550MD	CM	CDR08
AKAI		SA	CA9.12
AKAI	SA		C09.12
ALPINE	CM630	AS	CA09.
AMPLIFIER	SERIE500	AM	C01.01
AMPLIFIER	HA1366TA7222	REEM.	CA01.01
AMPLIFIER 10 W	TDA1510	AM.	CA01.01
ANTIQUE	TN616	AR	MHA5,P55
AR	3155SE/SU		MEA4,P117
ASEC	601		MEA4,P52
ASTOR	NITI-TON R9		MHA5,P57
ASTOR	SELEC-TON		MHA5,P58
ASTOR	IBY1		MHA5,P56
AUDIOLOGIC	SCR3266		MHA5,P59
AUDIOVOX			MEA4,P53
AUTOVOX			MHA5,P60
AUTOVOX	19701408		MHA5,P62
AUTOVOX	197014/50		MHA5,P61
AUTOVOX	MA707B		MEA4,P54
BANDEJA	BT713		MEA4,P56
BANDEJA	191M		MEA4,P55
BANDEJA	SA381		MEA4,P64
BANDEJA	MS110		MEA4,P63
BANDEJA	DS848		MEA4,P61
BANDEJA	KS885		MEA4,P62
BANDEJA	PASAMAGAZINE		MEA4,P65
BANDEJA	CR43		MEA4,P57
BANG & OLUFSEN		SI/AM	CA8.08
BANG & OLUFSEN	BEOMASTER2200	SI/AM.	CA02.
BELAIR			MEA4,P66
BELTEK	MR404		MEA4,P68
BELTEK	M6665S	AS	CA09.
BELTEK	MR573		MEA4,P70
BELTEK	MR551	AS	CA09.
BELTEK	MT512	AS	CA09.
BELTEK	MR502A		MEA2,P28
BELTEK			MEA4,P67
BELTEK	MR506		MEA4,P69
BGH	AM40	CO	CA06.
BGH	SC111	R	CA06.
BGH	4000	AR/PS	MHA4,P16
BGH	NDE8000	AR/PS	MHA6,P9
BGH	NDE8000	AR/AS	MHA6,P9
BIMAC	CP512		MEA4,P74
BLAUPUNKT	EXPORTSUPER31401		MHA5,P67
BLAUPUNKT		AR	MEA2,P32
BLAUPUNKT	MADISON CD127	AS	CA39.08
BLAUPUNKT	HAMBURG US7635511210		MEA4,P75
BLAUPUNKT	HANNOVER11TR		MHA5,P65
BLAUPUNKT	HAMBURG TR		MHA5,P66
BLAUPUNKT	FRANKFURT		MHA5,P64
BLAUPUNKT	BREMEN ATR		MHA5,P63
BOSCH	IP512V	AS	CA09.
BOSCH	IP743AC	AS	CA09.
BOSS	AVA270	UNIDAD AMPLIF.P/AUTO	CA01
BOSS	AVA670	UNIDAD AMPLIF.P/AUTO	CA01
BOSS	AVA470	UNIDAD AMPLIF.P/AUTO	CA01
BOSS	AVA570	UNIDAD/AMPLIF.P/AUTO	CA01
BOWMAR	SG1H	/HB/HX	MHA5,P68
BYE	T52111		MHA5,P72
BYE	2021		MHA5,P70

**Indice de AUDIO**

BYE	2021		MHA5,P71
BYE	3011		MHA5,P76
BYE	3011		MHA5,P77
BYE	T52111		MHA5,P75
BYE	T52111		MHA5,P73
BYE	T54232		MHA5,P78
BYE	T54232		MHA5,P79
BYE	T52111/3		MHA5,P74
CAMBRIDGE	R70N		MHA5,P201
CASIO	RZ1200	CD	CA17.06
CASIO	ND400DW	MC,DD,CD	CA17.07
CASIO	CD520W	WM	CA32.02
CASIO	RT200	RR	CA17.06
CASIO	TP9	WM	CA32.04
CASIO	CD610W	RG,DD,CD	CA17.03
CASIO	CD540W	RG,DD	CA17.04
CASIO	PZ820	CD	CA17.05
CASIO	ND150S	MC,DD,CD	CA17.06
CASIO	TP40	WM	CA32.06
CASIO	AS701R		CA32.07
CASIO	ND300DW	MC,DD,CD	CA17.01
CASIO	CD700DS	RG,DD,CD	CA17.02
CASIO	AS8008		
CASIO	TP41	WM	CA32.03
CENTURY	EQ1	EC	MEA4,P77
CLARION	PE809A2	AS	CA09.
CLARION	PE424		MEA4,P79
CLARION	PE650A	AS	CA09.
CLARION	PE651A	AS	CA09.
CLARION	8470R	AS	CA09
CLARION	PE420		MEA4,P78
COLUMBIA	1857		MHA5,P80
CONSTANT	GT170		MHA5,P81
CONTINENTAL	TR215		MHA5,P82
CRAIG	T617		MEA4,P80
CRAIG	T617		MHA5,P83
CROWN	CSC747F/S	RG ST 4 BANDAS	MEA1,P176
CROWN	TR820		MHA5,P86
CROWN	TRF1100		MHA5,P87
CROWN	TRF2800		MHA5,P89
CROWN	TRF2850		MHA5,P89
CROWN	CRC7550F		MHA5,P102
CROWN	TR660		MHA5,P88
CROWN	CRC9100S		MHA5,P92
CROWN	CSC9350M		MHA5,P91
CROWN	9950S		MHA5,P90
CROWN	CRC9100F		MHA5,P93
CROWN	CSC626F(X)		MHA5,P96
CROWN	TR333		MHA5,P85
CROWN	CSC640SW/SWS	RG ST 4 BANDAS	MEA1,P165
CROWN	TR76		MHA3,P84
CROWN	CSC626L(E)		MHA5,P94
CROWN	CSC626L(UK)		MHA5,P100
CROWN	CSC622WS		MHA5,P98
CROWN	CSC610F/S	RG ST 3 BANDAS	MEA1,P150
CROWN	CRC550SW/SWS	RG 4 BANDAS	MEA1,P143
CROWN	CRC475FW/SW/VDE	RG 3 BANDAS	MEA1,P134
CROWN	CSC650GT	RG ST 4 BANDAS	MEA1,P176
CROWN-MUSTANG	SZ2050/2150	MC ST/DD	MHA2,P23
CROWN-MUSTANG	MZ1000/1100	CM	MHA2,P37
CROWN-MUSTANG	GW1128PCD		CA26.02
CROWN-MUSTANG	GW1128P/RC	MC ST/BG/TD/ C/CR	MHA8,P56
CROWN-MUSTANG	GW1398		CA26.02
CROWN-MUSTANG	MZ2000	CM/DD/EC	MHA7,P9
CROWN-MUSTANG	MZ2100	CM/DD/EC	MHA7,P9
CROWN-MUSTANG	MC2160	CM/DD/D	CA01
CROWN-MUSTANG	GW2823CD/RC	MC ST/SI/DD	MHA4,P24
CROWN-MUSTANG	CZ300/310	AR/PS	MHA2,P7
CROWN-MUSTANG	SHC3300	CM	MHA6,P28
CROWN-MUSTANG	CD200N	DM/R	MHA2,P18
CROWN-MUSTANG	SZ4100	RG ST/DD/EC	MHA4,P30
CROWN-MUSTANG	SHC3200	CM	MHA6,P24
CROWN-MUSTANG	SZ270	RG ST/DD	MHA2,P32

**Indice de AUDIO**

CROWN-MUSTANG	CZ210V	AR/PS	MHA4,P28
CROWN-MUSTANG	CZ210V	AR/PS	MHA3,P9
CROWN-MUSTANG	CD210N	DM/R	MHA2,P18
CROWN-MUSTANG	CD22		CA26.02
CROWN-MUSTANG	CZ200V	AR/PS	MHA4,P28
CROWN-MUSTANG	CD110N	CD	MHA3,P20
CROWN-MUSTANG	CD100N	CD	MHA3,P20
CROWN-MUSTANG	CDC91		CA26.02
CROWN-MUSTANG	SZ77	RG ST	MHA3,P24
CROWN-MUSTANG	SZ46G	WM/R/EC	MHA2,P30
CROWN-MUSTANG	SZ45G	WM/R/EC	MHA2,P30
CROWN-MUSTANG	SZ4000	RG ST/DD/EC	MHA4,P30
CROWN-MUSTANG	CZ200V	AR/PS	MHA3,P9
DAIHATSU	D-C280	RG	CA36.11
DAIHATSU	D-RV30	RR	CA36.03
DAIHATSU	D-RP32	RADIO	CA36.05
DAIHATSU	D-WEQ2	WM	CA36.07
DAIHATSU	D-WS1	WM	CA36.07
DAIHATSU	D-AR30	WM	CA36.07
DAIHATSU	D-W100	WM	CA36.08
DAIHATSU	D-RP34	RADIO	CA36.09
DAIHATSU	D-RP33	RADIO	CA36.09
DAIHATSU	D-G15	RG	CA36.04
DAIHATSU	D-G25	RG	CA36.10
DAIHATSU	D-G21	RG	CA36.04
DAIHATSU	D-C260	RG	CA36.11
DAIHATSU	D-C221A	RG	CA36.13
DAIHATSU	D-M350	RG	CA36.13
DAIHATSU	D-M23	RG	CA36.13
DAIHATSU	D-CD75	RG	CA36.13
DAIHATSU	D-WD200	RG	CA36.13
DAIHATSU	D-G220A	RG	CA36.13
DAIHATSU	D-C211A		CA36.12
DAIHATSU	D-RP31	RADIO	CA36.09
DAIHATSU	D-RK1	RADIO POCKET	CA36.06
DAIHATSU	D-C221A		CA36.12
DAIHATSU	D-D73	DM	CA36.15
DAIHATSU	D-CD76	DM	CA36.15
DAIHATSU	D-EQ20	WM	CA36.08
DAIHATSU	D-G11	RG	CA36.04
DAIHATSU	D-D210A		CA36.13
DAIHATSU	D-G22	RG	CA36.10
DAIHATSU	D-M101	CM	CA36.14
DAIHATSU	D-RC10	RADIO	CA36.05
DAIHATSU	D-P10	GRAB.POCKET	CA36.03
DAIHATSU	D-G110A	RG	CA36.13
DAIHATSU	D-RK10	RADIO POCKET	CA36.06
DAIHATSU	D-RK2S	RADIO POCKET	CA36.06
DAIHATSU	D-RK3	RADIO POCKET	CA36.06
DAIHATSU	D-RK4S	RADIO POCKET	CA36.06
DAIHATSU	D-RR15	RR	CA36.03
DAIHATSU	D-RR20	RR	CA36.03
DAIHATSU	D-RR21	RR	CA36.03
DAIHATSU	D-P30	GRAB.PERIODISTA	CA36.03
DAIHATSU	D-M33	CM	CA36.16
DAIHATSU	D-M11	CM	CA36.14
DAIHATSU	D-CD73	DM	CA36.15
DAIHATSU	D-C230	RG	CA36.16
DAIHATSU	D-C215	RG	CA36.16
DAIHATSU	D-S10	WM	CA36.08
DAIHATSU	D-G210A	RG	CA36.13
DE WALD	CASSETTE CAR3600		MEA4,P84
DE WALD	DW440		MEA4,P86
DE WALD	DW450		MEA4,P87
DE WALD	CASSETTE CAR3200		MEA4,P82
DE WALD	CASSETTE CAR3400		MEA4,P83
DE WALD	DN410		MEA4,P85
DELCO	CHEVROLET987888		MHA5,P104
DELCO	RADIO VISION		MHA5,P103
DELCO	BUICK981970		MHA5,P105
DELM	1037		MHA5,P106
DELOS	JCD7R	RG ST/DD/CD	MHA7,P50
DELOS	JCD7R	RG ST/DD/CD	MHA7,P50

**Indice de AUDIO**

DELOS	SAI50CD	CM/CD/TD	MHA4,P38
DELOS	6868P &RC	RR	MHA6,P32
DELOS	6868P&RC	RR	MHA6,P32
DEWALD	703		MHA5,P107
DEWO	MC3300	MC/DD	MHA6,P34
DEWO	TDF80RG	RG ST/DD	MHA4,P9
DEWO	MC3300	MC/DD	MHA6,P34
DUMONT	RA902		MHA5,P108
ECUALIZ	7 BANDAS ST		MEA4,P88
EMERSON	PLAYSONIC	AR 8	MEA4,P90
EMERSON	DCF75	RR	CA06.
EMERSON	FALCON977		MHA5,P109
EMERSON	999		MHA5,P110
EREF			MEA4,P91
EROICA	TCD-M70	CM	CA23.06
EROICA	TCD5330	CM	CA23.06
EROICA	XR9219	CM	CA23.06
EROICA	SJ3429	CM	CA23.06
EROICA	SL3329	CM	CA23.06
EROICA	SD1009	CM	CA23.06
EROICA	SD1008	CM	CA23.06
EROICA	940	CM	CA23.06
EROICA	TAD913AR	CM	CA23.06
EROICA	TCT913AR	CM	CA23.06
EXACTOM	(P/12V)	AR.	CA01.02
EXACTOM	S.ECONOMICO	R	CA06.
EXACTOM	SUPREMO7	R	CA06.
EXACTOM	TRAGALEGUAS		MHA5,P111
FAIR MATE	DA1453	CD	CA04.
FAMAR	TRANSYC	AR.	CA01.02
FAPESA	R27		MHA5,P115
FAPESA	R53		MHA5,P116
FAPESA	R39		MHA5,P113
FAPESA	R33		MHA5,P114
FAPESA	AM9TR	AM.	CA01.01
FAPESA	PRE2TR	PRE.	CA01.01
FAPESA	AM2TRFET	AM.	CA01.01
FAPESA	B1W	AMP	CA01.01
FAPESA	R38		MHA5,P112
FIRESTONE	4C34		MHA5,P117
FISHER	PH-D8000	MC ST/CD/DD	MHA4,P48
FISHER	MC570	CM/DD/EC/CR	MHA2,P48
FISHER	MC750	CM/SI/DD/CD	MHA3,P32
FISHER	PH-W1000	MC ST/DD/EC	MHA2,P54
FISHER	PH-W3000	MC/DD/EC/CO RA	MHA6,P39
FISHER	PH-W3000	MC/DD/EC	MHA6,P39
FISHER	PH-W5000	MC ST/DD/EC	MHA2,P44
FOUR STAR	FS727		MEA4,P92
FRANKLIN	FR7353	R OL/OC	MEA1,P192
FUJIYA	TR10		MHA5,P118
FULTON	FC8888		MEA4,P93
G.KIGYO			MEA4,P94
GAMBLE-SKOGMO	RA509908A/09A		MHA5,P119
GELOSO	G299	GENERADOR	CA08.
GELOSO	N9051	MIC	CA08.
GELOSO	RFN2615	SINTONIZADOR	CA08.
GELOSO	G903R	R MULTIBANDA	CA08.
GELOSO	G208A	R OC/OM	CA08.
GELOSO	G207DR	R OC	CA08.
GELOSO	CONVERSOR/20/45 VA	A VIBRADOR	CA08.
GELOSO	G1511C	R/MIX/AI	CA08.
GEMINI	PMX-10	CON MIX/PRE ST	MHA6,P42
GEMINI	PMX10	CON MIX/PRE ST	MHA6,P42
GENERAL ELECT.	P725B		MHA5,P120
GENERAL ELECT.	P726B		MHA5,P120
GENERAL ELECT.	P852A		MHA5,P121
GENERAL ELECT.	P750A		MHA5,P120
GENERAL ELECT.	P853A		MHA5,P121
GENERAL MOTORS		AR	MHA5,P122
GOLDEN-CROW	CH168	RG	CA07.
GOLDSTAR	FR606A	CM	CA26.01
GOLDSTAR	TSW632/633	MC ST/DD	MHA4,P54
GOLDSTAR	FJ606	CM	CA26.01

**Indice de AUDIO**

GOLDSTAR	TMH40A	CM/CD C/R/DD/SI DI	MHA6,P43
GOLDSTAR	TMH40A	CM/CD/DD/SIDI/CORA	MHA6,P43
GOLDSTAR	CD-330A/L	CM	CA40.02
GOLDSTAR	FFH-292A/S/FE-393E	CM	CA40.02
GOLDSTAR	CD940A	=GRUNDIG RCD950	CA26.03
GRUNDIG	SC24	RR	CA01
GRUNDIG	AC-MX100	CM/DD/SI/EC	MHA4,P56
GRUNDIG	CCD990	SIMILAR AIWA CX-Z58	CA14.06
GRUNDIG	CC210	BG/TD/DD/CO RA	MHA8,P88
GRUNDIG	CBF145	RG	CA07.
GRUNDIG	CD103	CD	MHA7,P52
GRUNDIG	YACHT BOY100/200		MHA5,P123
GRUNDIG	MUSIC BOY100	R	MHA2,P57
GRUNDIG	FH90	CM/DD/SI/CR	MHA4,P56
GRUNDIG	CDP60	DM	MHA7,P74
GRUNDIG	TK46/U	GCA	CA05.
GRUNDIG	RR220	RG	CA07.
GRUNDIG	SC38	RG	CA01
GRUNDIG	SONOCLOCK SC225	RR	MHA3,P41
GRUNDIG	SAO13	WM	MHA2,P58
GRUNDIG	MINI10RAVENA	CD/DD/CO RA/SI DI	MHA7,P78
GRUNDIG	MUSIC BOY40	R	MHA3,P42
GRUNDIG	RCD950		CA26.03
GRUNDIG	C6200	RG	CA01
GRUNDIG	GCM4600		MEA4,P95
GRUNDIG	GSW4400	CM/DD/SI DI	MHA6,P56
GRUNDIG	GST4400	CM/DD/SI DI	MHA6,P56
GRUNDIG	GSA4400	CM/DD/SI DI	MHA6,P56
GRUNDIG	WKC4025	RG	CA07.
GRUNDIG	HI-FI4000	CM,DD,CD	CA07
GRUNDIG	HI-FI4000	CM,DD,CD	CA07
GRUNDIG	PARTY CENTER2400	CM/DD/EC	MHA2,P60
GRUNDIG	RCR1750	RG ST/DD/SI DI/EC	MHA7,P96
GRUNDIG	RR1200	RG ST/DD/CO RA/EC	MHA8,P94
GRUNDIG	PP220	WM/R	MHA3,P40
GRUNDIG	RR1110	RG ST/DD/CO RA	MHA8,P92
GRUNDIG	TMD100L	CM/DD/SI/EC	MHA4,P56
GRUNDIG	RR720		MHA5,P124
GRUNDIG	CCD650	CD/DD/CO RA/ C/CR	MHA8,P62
GRUNDIG	RR640		MHA5,P124
GRUNDIG	RR621		MHA5,P124
GRUNDIG	RR446	RG ST	MHA2,P59
GRUNDIG	CD435	CD	MHA8,P9
GRUNDIG	CD360	CD	MHA8,P9
GRUNDIG	V301	AM ST/ C/CR	MHA8,P82
GRUNDIG	T301	SI DI	MHA7,P56
GRUNDIG	BEAT BOY280	WM/AM-FM/SI DI/EC	MHA7,P94
GRUNDIG	TK247	GCA	CA05.
GRUNDIG	TK245/U	GCA	CA05.
GRUNDIG	RR1140	RG	CA07.
GRUNDIG	V101	AM ST/ C/CR	MHA7,P70
HAYTON	OL100		MHA5,P128
HITACHI	TH759		MHA5,P134
HITACHI	TH862R		MHA5,P135
HITACHI	WH855		MHA5,P141
HITACHI	WH832H		MHA5,P140
HITACHI	WH829		MHA5,P139
HITACHI	WH825		MHA5,P138
HITACHI	WH822		MHA5,P137
HITACHI	SDT7675	CM	MHA3,P62
HITACHI	WH761		MHA5,P136
HITACHI	XH1500		MHA5,P142
HITACHI	T728		MHA5,P129
HITACHI	SR703	SI/AM ST	MHA3,P43
HITACHI	KC671E(BS)W	RR	MHA3,P60
HITACHI	KC670W	RR	MHA2,P68
HITACHI	SR803	SI/AM ST	MHA3,P43
HITACHI	KH1200EX	R AM-FM	MHA2,P86
HITACHI	TH660		MHA5,P131
HITACHI	HA2500	AM ST/EC	MHA3,P70
HITACHI	FT4000L	SI AM-FM	MHA2,P80
HITACHI	FT4000	SI AM-FM	MHA2,P80
HITACHI	HA4500	AM ST	MHA4,P84

**Indice de AUDIO**

HITACHI	TRK5111	RG ST	MHA2,P64
HITACHI	TRK5190E/EW/(AU)	RG ST	MHA3,P48
HITACHI	TRK5240W	RG	MHA3,P52
HITACHI	TRK5280RW	RG ST	MHA4,P72
HITACHI	TRK5300E,E(AU),W	RG	MHA8,P96
HITACHI	TRK5317W	RG	MHA7,P100
HITACHI	TRK5351WR		MHA5,P148
HITACHI	TRK5600GW	RG AM-FM	MEA3,P7
HITACHI	SR903	SI/AM ST	MHA3,P43
HITACHI	D230W/RW/U/C	D ST	MHA6,P66
HITACHI	D-M1W	DECK ST	MHA2,P66
HITACHI	FT-M1(W)	SI/AM ST	MHA2,P70
HITACHI	HA-M1(W)	SI/AM ST	MHA2,P70
HITACHI	M1(W)	SI/AM ST	MHA2,P70
HITACHI	D33S(V,C,W)	D ST	MHA3,P54
HITACHI	PS38	BG/TD	MHA7,P99
HITACHI	D45S	(U,C,W,FS,BS,AU)	MHA4,P76
HITACHI	PS48	BG/TD	MHA8,P224
HITACHI	D55S(V,C,W)	D ST	MHA3,P58
HITACHI	CX100W		CA?
HITACHI	D220(BS,FS,W)	DECK ST	MHA4,P78
HITACHI	CSK228W	AR/PS	MHA2,P78
HITACHI	TH666		MHA5,P132
HITACHI	D230FS/BS/AU	D ST	MHA6,P66
HITACHI	TH666R		MHA5,P133
HITACHI	TRQ247	G	MHA2,P84
HITACHI	TRT270		MHA5,P143
HITACHI	SR302	SI/AM ST	MHA4,P86
HITACHI	HT324	BG/TD	MHA3,P68
HITACHI	HT350	BG/T.D.	MHA2,P63
HITACHI	HT354	BG	MHA4,P53
HITACHI	HT356	BG/TD	MHA6,P72
HITACHI	D450	D ST	MHA7,P102
HITACHI	SR502	SI/AM ST	MHA4,P86
HITACHI	CX-W520W		CA15.04
HITACHI	D550AU/RW	D ST	MHA8,P98
HITACHI	TH621		MHA5,P130
HITACHI	TRK7000WR		MHA5,P146
HITACHI	CSK229W	AR/PS	MHA2,P78
HITACHI	TRK8001W		MHA5,P144
HITACHI	TRK8010W	RG ST	MHA6,P62
HITACHI	TRK8010AU	RG ST	MHA6,P62
HITACHI	SDT8700RS (W,WA)	CM	MHA4,P80
HITACHI	SDT9210H	CM	MHA2,P74
HITACHI	SDT9310H	CM	MHA6,P68
HITACHI	SDT9320H	CM	MHA6,P68
HITACHI	SDT9410S/ST(W,WA)	CM	MHA4,P82
HOKUTONE	DT343K	RG ST/DD	MHA1,P18
HOLIDAY	TRP82		MHA5,P152
HOLIDAY	TRP587		MHA5,P151
HOLIDAY	H660		MHA5,P149
HOLIDAY	HT881		MHA5,P150
HOLLYWOOD			MHA5,P161
IMPERIAL			MHA5,P153
IN-DASH	NNX1	AS.	CA01.02
IN-DASH 2		AS.	CA01.02
INDASH	NN12	AS.	CA01.02
INDASH		AS	MEA2,P49
ITT	JC3210	RG ST/DD	MHA2,P96
ITT	HIF180/51	SI/AM/D	CA02.
ITT	MT640	RG ST/DD	MHA2,P96
ITT NOKIA	CD950	CD	MHA3,P77
ITT NOKIA	CD812/642	CM/DD/SI/CD	MHA3,P72
ITT NOKIA	CD810	CM/DD/SI	MHA4,P92
ITT NOKIA	BT758	CM/DD/CO RA/SI DI/EC	MHA6,P73
ITT NOKIA	CD700	CD PORTATIL	MHA7,P104
ITT NOKIA	CD42R	CD/CR	MHA3,90
ITT NOKIA	CD35R	CD	MHA3,P77
ITT NOKIA	CD951	CD	MHA3,P77
ITT NOKIA	JEC-938	CM	CA39.04
ITT NOKIA	CD35	CD	MHA3,P77
IWATA	TR6A		MHA5,P154
JAKARA	C901		MEA4,P96

**Indice de AUDIO**

JAKARA	MICRO7		MEA4,P97
JVC	XL-V151TN	CD	CA23.04
JVC	DR-E58BK	CM,DD,CD	CA15.03
JVC	DR-E59TN	CM,DD,CD	CA15.03
JVC	PC70C/W/WH/JW	RG ST	MHA1,P30
JVC	XL-P70A/B/C/E/G	CD/EC PORTATIL	MHA7,P112
JVC	PC-V88	RG	CA23.07
JVC	PC-V88AU	MC/DD/EC/SI	MHA4,P89
JVC	PC-W150C/J/U	RG ST/DD/EC	MHA4,P110
JVC	CA-MX54BK	CM,ST,CD,DD	CA01
JVC	XL-V152BK	CD	CA23.04
JVC	PC-W222BK	RG,ST,DD,RA	CA18.04
JVC	CA-MX50BK	CM	CA35.08
JVC	RC-QW35BK	RG	CA33.08
JVC	XL-V251TN	CD	CA23.04
JVC	PC-X100J	MC ST/CD/DD/CO RA/EC	MHA8,P100
JVC	PC3JW/W/WH/C	RG ST	MHA1,P34
JVC	MX-J980V		CA43.01
JVC	TEORIA DE CD		CA04
JVC	PC1W/JW	RG ST	MHA1,P30
JVC	RC-XC1BK	RG	CA19.05
JVC	CA-MXS2BK	MC	CA11.06
JVC	DR-E57TN		CA25.03
JVC	DC-ME3		CA25.09
JVC	DR-E56BK		CA25.03
JVC	HX5U	RG	CA23.08
JVC	PC5JW/C/W/WH	RG ST	MHA2,P88
JVC	PC5	RG ST	CA16.02
JVC	PC-XT5C/J	MC/DD/CDx2/SI DI/EC	MHA6,P83
JVC	CA-MX30BK	CM,DD,CD	CA18.05
JVC	MX-J970V		CA43.01
JVC	MX-D2TA	RG	CA19.06
JVC	MX-J330	CM	CA41.02
JVC	R-S77	SYNTHE.	CA40.07
JVC	XL-P33	CD	CA33.10
JVC	MX-D301OT	= 401 Y 501	CA25.02
JVC	XL-G2000		CA34.02
JVC	XL-V252BK	CD	CA23.04
JVC	MX-J35R	CM	CA41.02
JVC	MX-30	CM	CA41.02
JVC	MX-J10	CM	CA41.03
JVC	SP-X880	SISTEMA DE AUDIO	
JVC	XV-M567GD	DVD	
JVC	XV-M565BK	DVD	
JVC	XL-V330BK	CD	CA04.
JVC	KD-S600		CA43.02
JVC	265	RG	CA34.03
JVC	KD-S550		CA43.02
JVC	XV-525BK	DVD	
JVC	MX-J800	CM	
JVC	PC-Y777U	RG ST/DD/SI DI/EC	MHA6,P80
JVC	MX-D401T		CA25.02
JVC	MX-J100	CM	
JVC	MX-J850R	CM	
JVC	XV-421BK	DVD	
JVC	XV-521BK	DVD	
JVC	XV-523GD	DVD	
KEN BROWN	DX-255	CM	CA40.10
KEN BROWN	DX950	RG ST/DD	MHA3,P80
KEN BROWN	X900 (S1039)	CM/DD	MHA1,P40
KEN BROWN	SRC5600	RG ST	MHA2,P99
KEN BROWN	DX200	RG ST/DD	MHA1,P44
KENIA	KCT514	APS.	CA01.02
KENIA	TW715A	RG ST/DD	MHA2,P102
KENIA	KCH701	CM/CD/SI/D/CR	MHA4,P114
KENIA	K260	RG ST/DD	MHA2,P102
KENIA	K120	RG ST/DD	MHA3,P93
KENIA	KT514		MEA4,P98
KENIA	CK201	RG ST/DD	MHA1,P49
KENIA SHARP	SCM7000	CM/SI/AM/CD/DD	CA02.
KENIA SHARP	KCM401D	MC/SI/AM/CD/DD	CA02.
KENWOOD	UD50	CM/SI DI/CD//DD/EC	MHA6,P94
KENWOOD	UD50	CM/SIDI/CD/DD/EC/CR	MHA6,P94



**Indice de AUDIO**

KOLSTER	PLAY SONIC	AS	MEA4,P99
KOLSTER	PLAY SONIC	AS	MEA4,P100
KOWA	KT31		MHA5,P155
KOYO			MHA5,P161
LAFAYETTE	FS112		MHA5,P156
Le CYGNE	ACD240	MC/DD/SI/CD	MHA4,P128
LG	FFH680		CA32.10
LINMARK	T63		MHA5,P157
LLOYD'S	R809SERIE 725	CM	MHA1,P66
LLOYD'S	C101SERIE 835	CD	MHA1,P58
LLOYD'S	CS115	CM/DD/EC/CR	MHA2,P111
LLOYD'S	V316	RG ST	MHA4,P127
LLOYD'S	V444SERIE 709	RG ST/DD	MHA1,P62
LLOYD'S	555	MC/DD/EC	MHA2,P108
LLOYD'S	SERIE 744, R807	RG ST/DD	MHA3,P104
MACATONE	CDM7901		MHA5,P158
MACO	T16		MHA5,P159
MAGIXON	C9800		MEA4,P101
MAGNAVOX			MHA5,P160
MAGNAVOX	AZ8100GY	RG ST/CD	MHA2,P174
MANDARIN	R813		MHA5,P235
MARANTZ	PM5	PRE/AM	CA02.
MARANTZ	ST500	SI.	CA02.
MARANTZ	ST510	SI.	CA02.
MASON	C2	AS	CA9.12
MASON	C2	AS	C09.12
MECCA	883		MEA4,P103
MECCA	EL6861	APS	CA09.
MECCA			MEA4,P102
MEGATONE		RR AM-FM	MHA5,P236
MEKKA	FS62	AS	CA09.12
MEKKA	FS62	AS	CA9.12
MELODY		D	MEA4,P105
MELODY		APS	MEA4,P104
MICROSONIC	1300R	RG ST AM-FM	MEA1,P194
MICROSONIC	CTPR2800R	RG ST AM-FM	MEA1,P199
MIDO			MHA5,P161
MINERVA	RKS1115	RG ST/DD/CO RA	MHA8,P92
MINERVA	RKS1115	RG ST/DD/CORA	MHA8,P92
MINI 8	CS33		MEA4,P106
MINX	M2B63		MHA5,P163
MINX	M2B66		MHA5,P162
MINI 8	CS33		MEA4,P106
MITSUBISHI	AR3700SE/SUB		MEA4,P121
MITSUBISHI	AR2770SU/SE		MEA4,P111
MITSUBISHI	AR3300SU/SUB-II		MEA4,P119
MITSUBISHI	AR2779SUBK		MEA4,P115
MITSUBISHI	AR8729SEK/SUB		MEA4,P123
MITSUBISHI	AR8770		MEA4,P125
MITSUBISHI	AR8774SUB		MEA4,P129
MITSUBISHI	AR8780		MEA4,P131
MITSUBISHI	AR8774SEK		MEA4,P127
MITSUBISHI	DP504	CD	CA09.
MITSUBISHI	SERIE GX38		MEA4,P133
MITSUBISHI	HX-R44	D	CA09.
MITSUBISHI	GX83S		MEA4,P136
MITSUBISHI	AR2729SU-II		MEA4,P109
MITSUBISHI	DA-R504	SI/AM/EC	CA09.
MITSUBISHI	AR2774SU-II/SEK		MEA4,P113
MITSUBISHI	DT504	DD	CA09.
MITSUBISHI	E504	CR	CA09.
MITSUBISHI	LT504	BG	CA09.
MITSUBISHI	JR601	RG ST AM-FM	MEA1,P206
MITSUBISHI	RX733	SI/D/	CA09.
MITSUBISHI	TR803		MHA5,P164
MITSUBISHI	AR1780		MEA4,P107
MITSUBISHI	DA-R504	INFO VARIA	CA09.
MONTGOMERY WARD	GEN2030A/B		MHA5,P165
MOTORADIO	ACS-M21	AS	CA09.
MOTORADIO	ACR-M31	AS	CA09.
MOTORADIO	ACS-M31A	AS	CA09.
MOTOROLA	ND400	AR/PS	MHA1,P72
MOTOROLA	BGH F125B		MEA4,P153

**Indice de AUDIO**

MOTOROLA	BGH PM504		MEA4,P150
MOTOROLA	63DO25		MHA5,P168
MOTOROLA	BGH RC406		MEA4,P152
MOTOROLA	ND400		MEA2,P92
MOTOROLA	ND400	AR/PS	MHA2,P114
MOTOROLA	CHEVROLET400		MHA5,P171
MOTOROLA	BGH R246B		MEA4,P151
MOTOROLA	BGH TM261-335		MEA4,P157
MOTOROLA	BGH F128BC		MEA4,P153
MOTOROLA	BGH FI		MEA4,P154
MOTOROLA	MPC100	DESPIECE	MEA4,P145
MOTOROLA	CTA61BKA61	(CHEVROLET 61)	MHA5,P172
MOTOROLA	STANDARD12V		MHA5,P166
MOTOROLA	6X28B/N/P/W		MHA5,P167
MOTOROLA	2TMXD	(RENAULT 55555)	MHA5,P173
MOTOROLA	NDX	AR/PS	MHA3,P102
MOTOROLA	MO-PAU	(VALIANT 60)	MHA5,P174
MOTOROLA	BGH F128BC		MEA4,P153
MOTOROLA	BGH627		MEA4,P146
MOTOROLA	BGH IC532B		MEA4,P148
MOTOROLA	BGHNDE8000		MEA2,P80
MOTOROLA	NDE7135ALPINE	AR/PS	MHA1,P70
MOTOROLA	FIAT1500		MHA5,P170
MOTOROLA	BGH PC810		MEA4,P149
MOTOROLA	J800		MEA4,P144
MOTOROLA	TM627B		MEA4,P153
MOTOROLA	J600		MEA4,P143
MOTOROLA	BGH 1 GM551B		MEA4,P153
MOTOROLA	BGH IC532		MEA4,P147
MOTOROLA	FIAT600		MHA5,P169
MOTOROLA	BGH FMA630		MEA4,P156
MULLARD		R	MHA5,P175
MUTRANS	6T		MHA5,P176
NAKAMICHI	CP1	CD	CA11.05
NATIONAL	RS607	D	CA09.
NATIONAL	SS4000	SI/AM/D	CA09.
NATIONAL	RX1454M	RG AM-FM	MEA1,P224
NATIONAL	RQ2211	G	CA09.
NATIONAL	RX1494W	RG	CA09.
NATIONAL	RF4200	R AM-FM	CA09.
NATIONAL	RX1454M/W	RG	CA09.
NATIONAL	RF859H	R OL/OC/FM	MEA1,P214
NATIONAL	RQ2214/2234	G	CA09.
NATIONAL	RC6054B	RR	CA09.
NATIONAL	SA-T550	SI/AM	CA09.
NATIONAL	RF519	R AM-FM	MEA1,P213
NATIONAL	RC4895M	RR	CA09.
NATIONAL	RX4954F/FA	RG	CA09.
NATIONAL	SS5000	CM/SI/AM/D/BG	CA09.
NATIONAL	RX5030F/FA	RG	CA07.
NATIONAL	RX5030FA		MHA5,P180
NATIONAL	SS5050	CM/SI/AM/D/BG	CA09.
NATIONAL	RX5104F	RG	CA09.
NATIONAL	RX1450W		MHA5,P237
NATIONAL	RC6010V/RA		MHA5,P240
NATIONAL	RX1394	CM/SI/AM/D/BG	CA09.
NATIONAL	RC6094BG/CB/VM	RR	CA09.
NATIONAL	SS7070A/T/U	CM/SI/AM/D/BG	CA09.
NATIONAL	SH8028	EC	CA09.
NATIONAL	MS8800	SI/AM/D	CA09.
NATIONAL	SS9000	SI/AM/D	CA09.
NATIONAL	SS9090	CM/SI/AM/D/BG	CA09.
NATIONAL	MS9900	D/TD	CA09.
NATIONAL	RS608	D	CA09.
NATIONAL	RS614	D	CA09.
NATIONAL	RF4210W	R AM-FM	CA09.
NATIONAL	RC6003B	RR	CA09.
NATIONAL	SA290	SI/AM	CA09.
NATIONAL	RQ-K73	AM/D	CA09.
NATIONAL	RX1754M	RG	CA09.
NATIONAL	AB100		MHA5,P177
NATIONAL	RS-B105	D	CA09.
NATIONAL	SA110	SI/AM	CA09.

**Indice de AUDIO**

NATIONAL	SA-T150	SI/AM	CA09.
NATIONAL	EB165		MHA5,P179
NATIONAL	SA190	SI/AM	CA09.
NATIONAL	SG-K200	CM	CA02.
NATIONAL	RS-M201	D	CA09.
NATIONAL	RQ236S	RG AM-FM	MEA1,P215
NATIONAL	RQ309AS	G	CA09.
NATIONAL	RQ311S	G	CA09.
NATIONAL	RQ447FHS/FJS	RG	CA07.
NATIONAL	RQ447FHS/FJS		MHA5,P238
NATIONAL	RQ445DS	RG OL/OC	MEA1,P223
NATIONAL	RQ445S	RG AM-FM	MEA1,P222
NATIONAL	RQ444S	RG AM-FM	MEA1,P221
NATIONAL	RQ209MS	G	CA09.
NATIONAL	RQ339	G	CA09.
NATIONAL	RX-C37F	RG	CA09.
NATIONAL	AB321H		MHA5,P178
NATIONAL	SLQ-L1	TD	CA09.
NATIONAL	SL-Q3	TD	CA09.
NATIONAL	RS-T20	D/AM	CA09.
NATIONAL	SL-L20	TD	CA09.
NATIONAL	RQ432FJS	RG OL/OC/FM	MEA1,P217
NATIONAL			
PANASONIC	RS462S	RG	CA.09
NATIONAL			
PANASONIC	RS462S	RG	CA09
NATIONAL/PANASONIC			
IC	SG-3090LD	CM/BANDEJA	CA39.02
NEC	NT82H		MHA5,P181
NISSEI	TF201B	AR	CA09.
NISSEI	TF206	AS	CA09.
NISSEI	TF205	AS	CA09.
NISSEI	TF202	AS	CA09.
NN	CR44	APS.	CA01.02
NN	NN5	APS.	CA01.02
NN	RG7000X	AS	CA01.04
NN	Z1000	R AM/FM	CA01.04
NN	NN13	EC	CA08.
NN	883	APS	CA01.02
NN	TM105	APS.	CA01.02
NN	NN10	APS	CA01.02
NN	NN9	APS.	CA01.02
NN	NN8	APS.	CA01.02
NN	NN	AS	CA01.02
NN	NN6	APS.	CA01.02
NN	CDX1	CD	CA04.
NN	NN4	APS.	CA01.02
NN	CR4	RG	CA07.
NN	NN3	APS.	CA01.02
NN	NNX2	CM/SI/D/AM/BG	CA02.
NN	NN2	AS.	CA01.02
NN	CS-M2	PRE/DECK	CA02.
NN	NNV1	MIX	CA08.
NN	NNP1	RG	CA07.
NN	CS-M1A	PRE/DECK	CA02.
NN	NN7	AS.	CA01.02
NN (ITT)	PWC920	RG	CA07.
NN (SHARP)	PC100	RG	CA07.
NN 11	NN 11	AS.	CA01.02
NOBLEX	NT127		MHA5,P194
NOBLEX	NT128		MHA5,P196
NOBLEX	NT133		MHA5,P198
NOBLEX	W50	RG ST/DD	MHA1,P74
NOBLEX	NT169	RR AM-FM	MHA2,P134
NOBLEX	W250	RG ST/DD	MHA8,P106
NOBLEX	W250	RG ST/DD	MHA8,P106
NOBLEX	W250	RG	CA07.
NOBLEX	RC503	RG	MHA1,P92
NOBLEX	W580	RG ST/EC/DD	MHA3,P118
NOBLEX	PD760	MC ST/DD/EC	MHA4,P135
NOBLEX	1300	=SAMSUNG MAX-330	MHA8.P147
NOBLEX	ST-Q2520	RG ST	MHA1,P86
NOBLEX	NT132		MHA5,P200

**Indice de AUDIO**

NOBLEX	TN2B	R "CARINA"	CA05.
NOBLEX	TN7DISCATRON	R	CA06.
NOBLEX	PD52	MC ST/DD	MHA2,P119
NOBLEX	TS6/A	R	CA06.
NOBLEX	TN6DISCATRON	R	CA06.
NOBLEX	TN5	"GIULIETTA"	CA06.
NOBLEX	TN5A	R "GIULIETTA"	CA06.
NOBLEX	TN5B	R "GIULIETTA"	CA06.
NOBLEX	TN4	"BERNA"	CA06.
NOBLEX	T4B	R "EXTRABAND"	CA06.
NOBLEX	TN3	R "FABULINO"	CA06.
NOBLEX	TN3A	R "FABULINO"	CA06.
NOBLEX	7 MARES NT119		MHA5,P192
NOBLEX	TN2E	R "CARINA"	CA06.
NOBLEX	TS7	R "NOBLEZA"	CA06.
NOBLEX	TN2C		MHA5,P185
NOBLEX	TN2F	R "CARINA"	CA06.
NOBLEX	TN2G	R	MHA1,P95
NOBLEX	TN2C	R "CARINA"	CA06.
NOBLEX	TN2D	R "CARINA"	CA06.
NOBLEX	CARINA TN2F		MHA5,P188
NOBLEX	CARINA TN2D		MHA5,P183
NOBLEX	TN1	TD	CA06.
NOBLEX	AN1DISCATRON	R	CA06.
NOBLEX	TSA		MHA5,P186
NOBLEX	SMT	R	CA06.
NOBLEX	TN3		MHA5,P184
NOBLEX	ST-F57S	RG ST	MHA4,P132
NOBLEX	7 MARES NT118		MHA5,P190
NOBLEX	NT117A	R "FABULINO"	CA06.
NOBLEX	NT117A		MHA5,P182
NOBLEX	NT117	R "DUAL"	CA06.
NOBLEX	PD80	MC ST/DD	MHA1,P80
NOBLEX	PD70	MC ST/DD	MHA3,P110
NOBLEX	PD70	RG	CA07.
NOBLEX	P70	RG ST	MHA6,P118
NOBLEX	P70	RG ST	MHA6,P118
NOBLEX	W65	RG ST/DD	MHA2,P122
NOBLEX	PD65	RG ST/DD	MHA2,P116
NOBLEX	TS6A		MHA5,P187
NOBLEX	P65S	RG ST	MHA3,P107
NOBLEX	TN8A	CO "DISCOROLA"	CA06.
NOBLEX	W50	RG ST/DD	MHA3,P124
NOBLEX	W50	RG	CA07.
NOBLEX	ST-Q50	RG	MHA1,P96
NOBLEX	SCM8300	=SAMSUNG RCD 990	CA10.05
NOBLEX	W36	RG ST/DD	MHA2,P128
NOBLEX	P32	RG ST	MHA6,P116
NOBLEX	P32	RG ST	MHA6,P116
NOBLEX	W30	RG ST/DD	MHA1,P89
NORMAN	DODGE79		MEA4,P160
NORMAN	RENAULT 1279		MEA4,P163
NORMAN	DODGE75		MEA4,P159
NORMAN	ST.MAGAZINE		MEA4,P164
NORMAN	MONOCASSETTE		MEA4,P162
NORMAN	BOTONERA		MEA4,P158
NORMAN		AUTORADIO	MHA5,P204
NORMAN	MINI MONZA13061-13085		MEA4,P161
NORMAN STEREO	NS70		MEA4,P166
NORMAN STEREO	NE66		MEA4,P165
OCEAN		APS	MEA4,P168
OCEAN		D	MEA4,P169
OCEAN		D	MEA4,P170
OLYMPIC	766		MHA5,P205
ORION			MEA4,P171
PANASONIC	RQ-L340	WM	CA16.26
PANASONIC	SC-T90	DD/CO RA	MHA8,P106
PANASONIC	RX-DS101	RG,DD,CD	CA16.04
PANASONIC	SL-J120	BG	CA16.28
PANASONIC	RQ-V156	WM	CA16.23
PANASONIC	RQ-V195	WM	CA16.24
PANASONIC	RQ-P250	DM	CA08.
PANASONIC	CX385EU		MEA4,P172

**Indice de AUDIO**

PANASONIC	RX-C300F	MC/EC	MHA3,P132
PANASONIC	RS612US	D	C09.12
PANASONIC	SL-PC363CD		CA27.02
PANASONIC	SA-DH66	CM,DD,CD	CA16.06
PANASONIC	RX-CT950	MC/CR/DD	CA08.06
PANASONIC	RX-CT810	RG,DD	CA16.29
PANASONIC	RX-CS710	RG,DD,CD	C16.05
PANASONIC	RX-DT680	RG,DD,CD	CA16.03
PANASONIC	CQ-DP300EV	ACD	CA11.02
PANASONIC	SA-CH11	CM/SI/AM/DD/CD	CA02.
PANASONIC	CQ-R255SEUC	ST	CA38.06
PANASONIC	RQ-A60	WM	CA16.25
PANASONIC	RX-M3313W	RG	MHA4,P140
PANASONIC	SG-K200	CM	CA39.02
PANASONIC	SG3090LD	CD	CA39.02
PANASONIC	CQ-DP20EVC	ACD	CA11.01
PANASONIC	SA-HM32		CA08.05
PANASONIC	CQ-DP34EVC	ACD	CA11.02
PANASONIC	CQ-DP55EVC	ACD	CA11.02
PANASONIC	RX-C39F	RG ST/EC	MHA4,P138
PANASONIC	CQ-DP50EVC	ACD	CA11.02
PANASONIC	RQ-V54	WM	CA16.27
PANASONIC	SA-CH55	CD/SI DI/DD/CO RA	MHA7,P116
PANASONIC	SA-CH55	CD/SI DI/DD/CO	CA16.07
PANASONIC	CQ-DP36EVC	ACD	CA11.02
PANASONIC	RX-DT55	RG	CA22.10
PHILCO	FORD FALCON952		MHA5,P211
PHILCO	957		MEA4,P174
PHILCO	FAIRLANE980		MEA4,P175
PHILCO	AR1007	AR/PS	MHA3,P141
PHILCO	SERIE 6198987A	AR	MHA2,P150
PHILCO	C1000		MEA2,P111
PHILCO	950	AR	MEA4,P173
PHILCO	T600		MHA5,P206
PHILCO	SERIE 6198986A	AR	MHA2,P150
PHILCO	892	(FORD)	MHA1,P128
PHILCO	891	(FORD)	MHA1,P128
PHILCO	890	(FORD)	MHA1,P128
PHILCO	886	(FORD)	MHA1,P128
PHILCO	MC-4D23I	CM	CA39.06
PHILCO	AR1007	AS.	CA01.02
PHILCO	AKF611		CA09.11
PHILCO	PDA6000	CD	CA09.
PHILCO	PMS550D	SI/AM/D	CA09.
PHILCO	B508	R AM-FM	CA09.
PHILCO	B507	R 4 BANDAS	CA09.
PHILCO	B650/654	AR	CA09.
PHILCO	AUP8300E	BG/T.D.	MHA2,P146
PHILCO	AKF9345		CA09.11
PHILCO	AKF9531AX-C-P	AS	CA09.11
PHILCO	885(FORD)		MHA1,P128
PHILCO	B506	R 6 BANDAS	CA09.
PHILCO	AKF9251CAV		CA09.11
PHILCO	PU9176	AR/PS	CA09.10
PHILCO	PU9176Y-B(UET)	AR/PS	MHA4,P162
PHILCO	AKF9126	AS	CA09.11
PHILCO	AKF9064AD	AS	CA09.11
PHILCO	SERIE5000	AR/PS	MHA1,P125
PHILCO	AUT8300E (BG)	SI AM-FM	MHA1,P110
PHILCO	RM1010RE(S)/(L)	RG ST	MHA1,P114
PHILCO	AUK8300E(BG)(SG)	D ST	MHA1,P122
PHILCO	AUA8300E(SE)/(BS)	AM ST	MHA2,P136
PHILCO	MERCURY5944		MHA5,P208
PHILCO	PDA5000	CD	CA09.
PHILCO	AR4000	AR	MHA1,P104
PHILCO	AR3000	AR/PS	MHA2,P135
PHILCO	PR2504	R AM/OC	CA09.
PHILCO	PR2502/2503	RR/TI/AL	CA09.
PHILCO	AR2000	AR/PS	MHA3,P142
PHILCO	AX9020-40		CA09.11
PHILCO	CORDLESS T7		MHA5,P209
PHILCO	PTT50/51	BG	CA09.
PHILCO	PSR50/51	R AM-FM	CA09.

**Indice de AUDIO**

PHILCO	PCS32/33	R AM-FM/D/BG	CA09.
PHILCO	PSD30/31	R AM-FM	CA09.
PHILCO	PDR30	R AM-FM/D	CA09.
PHILCO	PCS30	CM/BG/D/SI/AM	CA09.
PHILCO	PCD30	D	CA09.
PHILCO	ADE8		CA09.11
PHILCO	PCD55/60/61	D	CA09.
PHILCO	PA7R5	R AM-FM	CA09.
PHILCO	ADE4-4		CA09.11
PHILCO	T6		MHA5,P206
PHILCO	PA2R7	R AM-FM	CA09.
PHILCO	ADE2		CA09.11
PHILCO		(FAIRLANE 980)	MHA5,P210
PHILCO		AR/PS	MHA1,P130
PHILCO	DV300K	CD,CDV,LD	CA32.08
PHILCO	MC4D44I	CM	CA33.02
PHILCO	CD500E	CD	MHA7,P137
PHILCO	887	(FORD)	MHA1,P128
PHILCO	PA7R6	AS	CA09.
PHILCO	T330E(SG)	SI AM-FM	MHA1,P120
PHILCO	B460C	R	CA09.
PHILCO	460P	(PEUGEOT 403)	MHA5,P207
PHILCO	PA2R6	R AM-FM	CA09.
PHILCO	RM360E(S)	RG	MHA3,P146
PHILCO	PSR55/60	R AM-FM	CA09.
PHILCO	T321ME(SG)	SI AM-FM	MHA3,P148
PHILCO	K315E(SG/SC)	D ST	MHA3,P143
PHILCO	A230E SE/SC/SS	AM ST	MHA4,P160
PHILCO	A210ME	AM ST	MHA1,P112
PHILCO	PSS201	SI/AM/DD/BG/EC	CA09.
PHILCO	PSS200	SI/AM/D/BG	CA09.
PHILCO	RA108	AR	CA09.
PHILCO	RA115	AR/PS AUTO EJECT	MHA8,P116
PHILCO	PSS101	D/BG/AM	CA09.
PHILCO	RA114	AR/PS/AUTORREVERSE	MHA6,P122
PHILCO	C100		CA09.11
PHILCO	RA109/1	AS	CA09.
PHILCO	RA109	AS	CA09.
PHILCO	RD101	R 4 BANDAS	CA09.
PHILCO	PSS100	SI/D/BG/AM	CA09.
PHILCO	RD115	RR/TI/AL	CA09.
PHILCO	PTT55/60	BG	CA09.
PHILIPS	FW46	CM	CA14.03
PHILIPS	AL76T		MHA5,P218
PHILIPS	90AS90	RR	CA06.
PHILIPS	90AR108/43	RG	MHA3,P150
PHILIPS	FW56	CM	CA15.06
PHILIPS	FW41	CM	CA14.05
PHILIPS	90AR108/45	RG	MHA3,P150
PHILIPS	FW31	CM	CA31.07
PHILIPS	FW30	CM/CD/DD	CA07.04
PHILIPS	29AS189	RR	CA06.
PHILIPS	FW26	CM,CD,DD,	CA23.02
PHILIPS	22AC998/00/50	AR	MEA2,P136
PHILIPS	22AC880/00/29/61		MEA4,P201
PHILIPS	FW36	CM	CA14.04
PHILIPS	90AR108/OO	RG	MHA3,P150
PHILIPS	90RL113		MHA5,P234
PHILIPS	90RL136	RR	MHA1,P174
PHILIPS	90AS300/00	RR	MHA2,P162
PHILIPS	90AS300/40	RR	MHA2,P162
PHILIPS	90AS300/01	RR	MHA2,P162
PHILIPS	90AS300/45	RR	MHA2,P162
PHILIPS	90AS460/00/15/22	RR	CA06.
PHILIPS	90AS490	RR	CA06.
PHILIPS	90AR508	RG	CA07.
PHILIPS	90DC668	AR/PS	MHA1,P160
PHILIPS	90AS690/40	RR	MHA3,P153
PHILIPS	22AC860/80/82/89		MEA4,P191
PHILIPS	L1AL76T-70		MHA5,P219
PHILIPS	90RL250/OO/22/01		MHA5,P232
PHILIPS	1RL426OO		MHA5,P214
PHILIPS	90AS690/45	RR	MHA3,P153

**Indice de AUDIO**

PHILIPS	AZ6812/17	DM	MHA8,P124
PHILIPS	NN	RG	CA07.
PHILIPS	NN	RR	CA09.12
PHILIPS	9028/00/43	RG	MHA1,P171
PHILIPS	NNR1	R	CA06.
PHILIPS	L1AL56T		MHA5,P219
PHILIPS	1RL106116		MHA5,P217
PHILIPS	1RL176OOB		MHA5,P212
PHILIPS	1RL246/00		MHA5,P227
PHILIPS	1RL316		MHA5,P220
PHILIPS	1RN326/OO		MHA5,P222
PHILIPS	1AS150/01	RR	MHA1,P147
PHILIPS	1RR406		MHA5,P223
PHILIPS	22AC688/00		MEA4,P186
PHILIPS	1RL426/70		MHA5,P226
PHILIPS	1RN506/OO		MHA5,P221
PHILIPS	1RR539/OO		MHA5,P224
PHILIPS	1RR539/00	RG	CA07.
PHILIPS	L2AL6/36		MHA5,P216
PHILIPS	B4AL80U	R 4 BANDS	CA06.
PHILIPS	6AC60	APS	CA09.
PHILIPS	F6AL90A	CO	CA02.
PHILIPS	6AH325	AM.	CA01.01
PHILIPS	6AC678/00	AS	CA09.
PHILIPS	TAPC6AH936/77	CM	MHA3,P156
PHILIPS	22AC60/00		MEA4,P176
PHILIPS	22AC678/00/80E		MEA4,P180
PHILIPS	1RL396OO		MHA5,P213
PHILIPS	D808910R	RG ST/DD	MHA1,P166
PHILIPS	D8479	RG	CA07.
PHILIPS	D8479	RG ST/DD/AM-FM	MEA3,P35
PHILIPS	AZ8340	RG,DD,CD	CA18.04
PHILIPS	AZ8301	RG,DD,CD	CA14.07
PHILIPS	AZ8301/01	RG ST/CD/SI DI/DD/EC	MHA6,P136
PHILIPS	D8279	RG	CA07.
PHILIPS	D826910	MC ST/DD	MHA2,P165
PHILIPS	D8269/2	MC ST/DD	MHA2,P165
PHILIPS	D8269/1	RG	CA07.
PHILIPS	D8269/1	MC ST/DD	MHA2,P165
PHILIPS	D8269/01/02/10	RG ST/DD/AM-FM	MEA3,P22
PHILIPS	D8128/01/10/19	RG	CA07.
PHILIPS	AW7110S	RG ST/DD	MHA3,P166
PHILIPS	AZ8100GY	RG ST/CD	MHA2,P174
PHILIPS	D854301/10/17	RG ST AM-FM/EC	MEA3,P46
PHILIPS	D80891R	RG ST/DD	MHA1,P166
PHILIPS	D8089	RG	CA07.
PHILIPS	D808901R/10R	RG/DD/AM-FM	MEA3,P13
PHILIPS	D804717	RG ST	MHA2,P152
PHILIPS	D8047	RG ST	MHA2,P152
PHILIPS	D8047	RG ST AM-FM	MEA3,P8
PHILIPS	D8047	RG ST	MHA2,P152
PHILIPS	AW7530	RG	CA14.02
PHILIPS	AW7301	RG	CA07.
PHILIPS	AW711017	RG ST/DD	MHA3,P166
PHILIPS	AW711010	RG ST/DD	MHA3,P166
PHILIPS	AW71101	RG ST/DD	MHA3,P166
PHILIPS	D8128	RG ST	MHA7,P140
PHILIPS	FW575C	CM	CA37.01
PHILIPS	DC401	AS	CA31.09
PHILIPS	DC610	AS	CA31.09
PHILIPS	668	AS	CA31.09
PHILIPS	AK-630	CD	CA33.03
PHILIPS	AZ6811/10	DM	MHA8,P124
PHILIPS	90AS690/60	RR	MHA3,P153
PHILIPS	FW650C	CM	CA38.03
PHILIPS	FW730C	CM	CA38.01
PHILIPS	FW850C	CM	CA38.02
PHILIPS	FW855C	CM	CA38.02
PHILIPS	AZ9855	RG	CA37.03
PHILIPS	AZ9955FW	RG	CA37.03
PHILIPS	D84791/10	RG ST/DD/EC	MHA1,P153
PHILIPS	FW535C	CM	CA37.01
PHILIPS	D8543	RG ST/EC	MHA1,P132

**Indice de AUDIO**

PHILIPS	FW11/20/21/25/31	CM/CD	CA39.01
PHILIPS	AZ9435	RG,DD,CD	CA015.01
PHILIPS	AZ9430	RG,DD,CD	CA015.01
PHILIPS	AS940021	CM/DD/SI/EC	MHA3,P173
PHILIPS	AS94001	CM/DD/SI/EC	MHA3,P173
PHILIPS	AS9300	CM,DD,SI,BA,	CA18.10
PHILIPS	AZ9040	RG,DD,CD	CA18.06
PHILIPS	AZ9025	RG,DD,CD	CA15.02
PHILIPS	AZ9020	RG,DD,CD	CA15.02
PHILIPS	AZ8700/10	MC/CD/DD/EC	MHA4,P143
PHILIPS	D8623		CA15.08
PHILIPS	D8543	RG	CA07.
PHILIPS	D827901/10	RG ST/DD/AM-FM	MEA3,P30
PHILIPS	FW355C	CM	CA37.02
PHILIPS	FW330	CM,DD,CD	CA16.01
PHILIPS	AK730/5	CD CARROUSEL	MHA6,P129
PHILIPS	AK730/1	CD CARROUSEL	MHA6,P129
PHILIPS	AK730/	CD CARROUSEL	MHA6,P129
PHILIPS	AK729/17/M	CD CARROUSEL	MHA6,P129
PHILIPS	AS645	CM	CA30.08
PHILIPS	AS642	CM	CA30.08
PHILIPS	AS641	CM	CA30.08
PHILIPS	AS640	CM	CA30.08
PHILIPS	AK601	CD	CA18.02
PHILIPS	RS450	CM,DD,ST	CA17.08
PHILIPS	AS445	CM,CD,DD,SI	CA18.09
PHILIPS	AS440	CM,CD,DD,SI	CA18.09
PHILIPS	AS405	CM,DD,ST	CA17.08
PHILIPS	AK730/10	CD CARROUSEL	MHA6,P129
PHILIPS	90AS790	RR	CA06.
PHILIPS	90AS690/00	RR	MHA3,P153
PHILIPS	90AS690/15	RR	MHA3,P153
PHILIPS	90AS690/01	RR	MHA3,P153
PHILIPS	90AS690/10	RR	MHA3,P153
PHILIPS	90AL765/OO/22/43		MHA5,P228
PHILIPS	FW360	CM,DD,CD	CA27.01
PHILIPS	90AR778/00	RG ST	MHA1,P138
PHILIPS	CD350	CD	CA04.
PHILIPS	D8279/1/10	RG ST/DD/EC	MHA4,P166
PHILIPS	90AH910/45	CM	MHA2,P159
PHILIPS	AW7110/	RG ST/DD	MHA3,P166
PHILIPS	90AH910/05	CM	MHA2,P159
PHILIPS	CD165	CD	
PHILIPS	90AH910/85	CM	MHA2,P159
PHILIPS	90AC768		C06
PHILIPS	AK730/17	CD CARROUSEL	MHA6,P129
PHILIPS	D4100/00/02/14	RR	CA06.
PHILIPS	AZ6806/	DM	MHA7,P146
PHILIPS	AZ6806/1	DM	MHA7,P146
PHILIPS	AZ6806/5	DM	MHA7,P146
PHILIPS	AZ6806/10	DM	MHA7,P146
PHILIPS	AZ6806/17	DM	MHA7,P146
PHILIPS	D3010/01/10/11	RR	CA06.
PHILIPS	AZ6811/1	DM	MHA8,P124
PHILIPS	AZ6811/	DM	MHA8,P124
PHILIPS	90AL860/OO/15/22		MHA5,P230
PHILIPS	AZ6811/17	DM	MHA8,P124
PHILIPS	AZ6813/	DM	MHA8,P124
PHILIPS	AZ6813/17	DM	MHA8,P124
PHILIPS	AZ6813/5	DM	MHA8,P124
PHILIPS	AZ6813/1	DM	MHA8,P124
PHILIPS	AZ6811/5	DM	MHA8,P124
PHILIPS	TAPC-F1238	CM/SI/AM/D/BG	CA02.
PHILIPS	N2537	D	MHA1,P150
PHILIPS	TAPCF14721/90	CM/DD	MHA3,P160
PHILIPS	F1719/1	CM	MHA1,P144
PHILIPS	TAPCF1260/01	CM	MHA1,P175
PHILIPS	FW2010/21	CM	CA14.01
PHILIPS	FW2012	CM/CD	CA06.03
PHILIPS	FW2015	CM	CA14.01
PHILIPS	N2204/	G	CA05.
PHILIPS	N2227/	G	MHA2,P156
PHILIPS	N2227/45	G	MHA2,P156



**Indice de AUDIO**

PHILIPS	F1385/10/30/40	CM/SI/AM/BG	CA02.
PIGMEO	REFLEX		MHA5,P242
PIGMEO	3T		MHA5,P241
PIONEER	KEH1400	AS	CA34.11
PIONEER	DEH225	AS	CA34.11
PIONEER	DEH425	AS	CA34.11
PIONEER	DEH42	AS	CA34.11
PIONEER	DEH49	AS	CA34.11
PIONEER	XR-J11M	CM	CA34.09
PIONEER	DEH525	AS	CA34.11
PIONEER	DEH52	AS	CA34.11
PIONEER	XR-P330M	CM	CA33.04
PIONEER	DEH59	AS	CA34.11
PIONEER	DEH636	AS	CA34.08
PIONEER	KEH1311	AS	CA34.11
PIONEER	KEH-P5400	AS	CA34.11
PIONEER	KEH-P505	AS	CA34.11
PIONEER	KEH-P3400	AS	CA34.11
PIONEER	KEH-P4400	AS	CA34.11
PIONEER	KEH-P404	AS	CA34.11
PIONEER	DEH536	AS	CA34.08
PIONEER	RX-Z35	CM	CA34.10
PIONEER	KEH1100	AS	CA34.11
PIONEER	KEH1150	AS	CA34.11
PIONEER	XR-J22M	CM	CA34.09
PIONEER	DEH640	ACD	CA19.02
PIONEER	SA7800		CA34.12
PIONEER	KEH5250	AS	CA12.03
PIONEER	KEH5200	AS	CA12.03
PIONEER	KEH5300	AS	CA12.03
PIONEER	KEH-P4450	AS	CA34.11
PIONEER	KEH-P3750	AS	CA35.07
PIONEER	KEH-P3700	AS	CA35.07
PIONEER	KEH-P3450	AS	CA34.11
PIONEER	DEH323	AS	CA34.11
PIONEER	KEH1300	AS	CA34.11
PIONEER	RX-Z45	CM	CA34.03
PIONEER	DEH523	AS	CA34.11
PIONEER	XR-P270	AS	CA34.11
PIONEER	DEH223	AS	CA34.11
PIONEER	KEH-P3750	ST	CA35.07
PIONEER	KEH-P3700	ST	CA35.07
PIONEER	XR-P170C	CM	CA34.13
PIONEER	XR-P270C	CM	CA34.13
PIONEER	SA-7800	RG	CA34.12
PIONEER	CT-F650	RG	CA34.12
PIONEER	KEH5301	AS	CA12.03
PIONEER	KEH1450	AS	CA34.11
PIONEER	SX780	SI/AM	CA09.12
PIONEER	DEH505	ACD	CA22.07
PIONEER	DEH520	ACD	CA19.02
PIONEER	DEH580	ACD	CA10.04
PIONEER	DEH680	ACD	CA10.04
PIONEER	DEH720	ACD	CA19.02
PIONEER	DEH730	ACD	CA19.02
PIONEER	DEH740	ACD	CA10.04
PIONEER	DEH503	ACD	CA22.07
PIONEER	DEH780	ACD	CA10.04
PIONEER	DEH540	ACD	CA10.04
PIONEER	KE1900	ACD	CA23.03
PIONEER	KE2900	ACD	CA23.03
PIONEER	KEH-P4005	AUTOESTEREO	CA12
PIONEER	KEH-P5005	AUTOESTEREO	CA12
PIONEER	VSX7300S		CA25.01
PIONEER	KP8001		MEA4,P210
PIONEER	VSX9300S		CA25.01
PIONEER	XR-P740	ACD	CA19.08
PIONEER	DEH-M66	ACD	CA10.04
PIONEER	SX-P30	CM/DD/AM/CD/SI	CA10.02
PIONEER	DEH44	ACD	CA19.02
PIONEER	DEH45	ACD	CA22.07
PIONEER	XR-P640	ACD	CA19.08
PIONEER	DEH66		CA24.08

**Indice de AUDIO**

PIONEER	DEH440	ACD	CA19.02
PIONEER	CLD-S201	LD	CA10.09
PIONEER	DEH203	ACD	CA22.07
PIONEER	DEH205	ACD	CA22.07
PIONEER	DEH405	ACD	CA22.07
PIONEER	CLD-S250	LD	CA10.09
PIONEER	KP300	AS	CA09.
PIONEER	DEH303	ACD	CA22.07
PIONEER	AS305(ENSAMBLE)	BAFFLE	CA08.
PIONEER	DEH305	ACD	CA22.07
PIONEER	DEH48	ACD	CA10.04
PIONEER	XR-P340	ACD	CA19.08
PIONEER	KP212		MEA4,P209
PONTIAC	988837		MHA5,P243
POWERFUL	STANDARD		MHA5,P244
PRECISION		AS.	CA01.01
PYRAMID	2000EQ	AS	CA01.04
RADIOGRABADOR	CR4	RG ST AM-FM	MEA3,P54
RADIOLA	RA232T		MEA4,P211
RAF	601		MHA5,P245
RAMCO	200		MHA5,P246
RANDIX	SCR3266		MHA5,P59
RANSER	KE602A	AM	MHA4,P186
RANSER	KE201	AM	MHA4,P186
RANSER	KE3004	AM/PRE ST	MHA6,P163
RANSER	KE3004	AM-PRE ST	MHA6,P163
RANSER	KE608A	MOD.AM.	MHA1,P185
RANSER	AE595A	AM	MHA4,P186
RANSER	Q310X	TD/RADIO	MHA1,P183
RANSER	RI214122	CO ST	MHA3,P191
RANSER	RE206	AM ST	MHA3,P192
RANSER	RE204	AM/PRE ST	MHA4,P172
RANSER	RI203	AM/PRE ST	MHA1,P184
RANSER	KE2004	AM/PRE MONO	MHA1,P180
RANSER ELITE	PA355	AM ST	MHA3,P190
RANSER ELITE	PS15	SI AM-FM	MHA1,P182
RAYTHEON	T2500		MHA5,P247
RCA		RG AM-FM	MEA3,P55
RCA VICTOR	1BT58		MHA5,P248
RCA VICTOR	11BT58XK		MHA5,P249
RCA VICTOR		AR	MHA5,P250
RCA VICTOR		RR	MHA5,P251
REALTONE	TR801		MHA5,P252
RECEPTOR	AM/FM	D	MEA4,P212
RECEPTOR	AM/FM/MPX	APS	MEA4,P213
RECEPTOR	CRF150M		MEA4,P214
RECEPTOR	CRF2000M		MEA4,P215
REGENCY	TR1		MHA5,P253
REGENCY	XR2A		MHA5,P255
REGENCY	TR11		MHA5,P254
RINSIG	RC204R		MHA5,P390
RINSIG	RC363R/JW		MHA5,P391
RIVIERA	CTR210F	RG AM-FM	MEA3,P56
ROADSTAR	RS2500N	AS	CA09.
ROADSTAR	RS2900	AS	CA09.
ROADSTAR	RS5000GPX	AS	CA09.
ROADSTAR	RS2100N DUKE	AS	CA09.
ROADSTAR	RS3400	AS	CA09.
ROADSTAR	IB33001A/07	AS.	CA01.02
ROADSTAR	RS2600HP	AS	CA09.
ROADSTAR	RS2505	AS	CA09.
ROADSTAR	RS2200	AS	CA09.
ROADSTAR	RS1500	APS.	CA01.02
ROADSTAR	RS1500		MEA4,P216
ROADSTAR	RS3700HP	AS	CA09.
ROBERTS	CC10FM		MEA4,P218
ROLAND	4TR		MHA5,P256
SABA	TKR15		MEA4,P219
SABEL			MHA5,P161
SAMSUNG	DV5000N		CA10.05
SAMSUNG	MY-CD2		CA10.05
SAMSUNG	DVD907	DVD - MAN.DE SERVICE	CDR04
SAMSUNG	MAX-860	AUDIO - M.SERVICE	CDR03

**Indice de AUDIO**

SAMSUNG	MAX-852	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-818	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-810	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-670	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-632	AUDIO - M.SERVICE	CDR03
SAMSUNG	C1000T	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-630	AUDIO - M.SERVICE	CDR03
SAMSUNG	VIP-8400	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-610	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-557	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-530	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-477	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-445	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-440	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-380	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-880	AUDIO - M.SERVICE	CDR03
SAMSUNG	RCD2600		CA10.05
SAMSUNG	RCD1360	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-888	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-910,16	AUDIO - M.SERVICE	CDR03
SAMSUNG	MM16	AUDIO - M.SERVICE	CDR03
SAMSUNG	MM18	AUDIO - M.SERVICE	CDR03
SAMSUNG	MM191	AUDIO - M.SERVICE	CDR03
SAMSUNG	MM26	AUDIO - M.SERVICE	CDR03
SAMSUNG	MM28	AUDIO - M.SERVICE	CDR03
SAMSUNG	MM39	AUDIO - M.SERVICE	CDR03
SAMSUNG	DVD905	DVD - MAN.DE SERVICE	CDR04
SAMSUNG	MX960,80	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX-868	AUDIO - M.SERVICE	CDR03
SAMSUNG	RCD1650	AUDIO - M.SERVICE	CDR03
SAMSUNG	RCD380,90	AUDIO - M.SERVICE	CDR03
SAMSUNG	SCM67001	AUDIO - M.SERVICE	CDR03
SAMSUNG	SCM-6800	AUDIO - M.SERVICE	CDR03
SAMSUNG	SCM-8100	AUDIO - M.SERVICE	CDR03
SAMSUNG	SCM-8200	AUDIO - M.SERVICE	CDR03
SAMSUNG	SCM-8300	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX610	CM	CA41.06
SAMSUNG	MX932,36,40	AUDIO - M.SERVICE	CDR03
SAMSUNG	MAX330	CD/SIDI/DD/EC	MHA8,P138
SAMSUNG	RCD995		CA10.05
SAMSUNG	RCD990	=NOBLEX SCM-8300	CA10.05
SAMSUNG	PD790		CA10.05
SAMSUNG	PD780	RG ST/DD	MHA2,P182
SAMSUNG	PCD710		CA10.05
SAMSUNG	PCD700		CA10.05
SAMSUNG	LDK700		CA10.05
SAMSUNG	MAX-345	AUDIO - M.SERVICE	CDR03
SAMSUNG	PD650	RG ST/DD/EC	MHA3,P186
SAMSUNG	DV5000NK		CA10.05
SAMSUNG	MAX330	CD/SI DI/DD/EC/ C/CR	MHA8,P138
SAMSUNG	WH260		CA10.05
SAMSUNG	STF123		CA10.05
SAMSUNG	CD42R		MHA6,P168
SAMSUNG	CD42R	CD C/CR	MHA6,P168
SAMSUNG	CD35/R		CA10.05
SAMSUNG	CD35R	CD	MHA4,P173
SAMSUNG	RCH19		CA10.05
SAMSUNG	VIP670		CA10.05
SAMSUNG	SCM7800	CM,CD,DD,CR	CA10.10
SAMSUNG	VIP850	CM	CA39.05
SAMSUNG	RCD1250		CA10.05
SAMSUNG	SCM8550	CM,CD,DD,CR	CA10.11
SAMSUNG	RCD1300	SIMILAR	CA10.05
SAMSUNG	SCM7550	CM,CD,DD,CR	CA10.12
SAMSUNG	SCM6900		CA10.05
SAMSUNG	SCM6500		CA10.05
SAMSUNG	SCM6500	CD/DD/EC/CORA/CR	MHA7,P212
SAMSUNG	SCM6500	CD/DD/EC/SI DI/BG/TD	MHA7,P212
SAMSUNG	SCM6100		CA10.05
SAMSUNG	SCM6100	CM/SI/AM/DD/CD	CA02.
SANKEI	TCE333	AS.	CA01.02
SANKEI	TCR800H	RG	CA07.
SANKEI	TCE222	AS	CA09.

**Indice de AUDIO**

SANSEI	ACD240	MC/DD/SI DI/CD	MHA6,P164
SANSEI	ACD240	MC/DD/SIDI/CD	MHA6,P164
SANSEI	KC812	G	MEA3,P57
SANSEI	ACD2400	MC/DD/SIDI/CD	MHA6,P164
SANSEI	ACD2400	MC/DD/SI DI/CD	MHA6,P164
SANSUI	DA-T500L	CM	CA20.13
SANSUI	CD-X317EX	CD	CA10.06
SANSUI	FR-D4	BG	CA01.02
SANSUI	T-M5/M5L	SI PROGRAMABLE	MHA3,P194
SANSUI	AU-G11X	AM ST	MHA4,P176
SANSUI	AT20	TI	MHA3,P193
SANSUI	P-D21D11	BG/T.D.	MHA2,P188
SANSUI	G-M77	EC	MHA2,P190
SANSUI	AU117II	PRE/AM	CA01.01
SANSUI	DA-T555	CM/SI/AM	MHA4,P178
SANSUI	CD-X311II	CD	CA10.06
SANSUI	D370	D/G ST	MHA2,P186
SANSUI	DA-T550	CM/SI/AM	MHA4,P178
SANSUI	D900WR	DD	CA20.05
SANSUI	MC1000L	SA	CA20.09
SANSUI	SC1300	D	CA20.06
SANSUI	SC1330	D	CA20.06
SANSUI	SC5300	D	CA20.03
SANSUI	SC5330	D	CA20.03
SANSUI	CD-X211	CD	CA10.06
SANYO	ATR20DA	SI/AM/D/BG	CA09.
SANYO	RM5010		MHA5,P284
SANYO	M2429N	RG OL/OC/FM	MEA1,P273
SANYO	FT4301		MEA4,P226
SANYO	FT4320	RG	CA09.
SANYO	FT4320		MEA4,P227
SANYO	FT4320	AR	CA09.
SANYO	FT4400M	AM	MEA4,P229
SANYO	FT4461		MEA4,P233
SANYO	FT4464		MEA4,P235
SANYO	FT4021		MEA4,P225
SANYO	GXT4545K/K2/K3	SI/AM/D/BG/	CA09.
SANYO	FT4001A		MEA4,P224
SANYO	RP5040		MHA5,P265
SANYO	RP5040	R	CA09.
SANYO	RP5065	R	MHA3,P224
SANYO	RP5140	R	CA09.
SANYO	RP5140		MHA5,P273
SANYO	RP5225		MHA5,P269
SANYO	RP5230	R	MHA4,P187
SANYO	RP5445		MHA5,P274
SANYO	RP4500		MHA5,P272
SANYO	M2564N	RG OL/OC/FM	MEA1,P356
SANYO	M2429H	RG OL/OC	MEA1,P259
SANYO	M2429F	RG AM-FM	MEA1,P266
SANYO	M24292F/2N	RG	CA09.
SANYO	M2432RN	RG	CA09.
SANYO	M2555N	RG OL/OC/FM	MEA1,P280
SANYO	M25552H	RG OL/OC/FM	MEA1,P288
SANYO	M25552F	RG AM-FM	MEA1,P297
SANYO	M2560H		MHA5,P282
SANYO	GT4100		CA20.07
SANYO	M2562F	RG AM-FM	MEA1,P339
SANYO	RM6100/N	RR	CA09.
SANYO	M2564F	RG AM-FM	MEA1,P347
SANYO	M2709F	RG	CA09.
SANYO	M2800F	RG	CA09.
SANYO	M2800F	RG/AM-FM	MEA3,P114
SANYO	M2818F	RG	CA09.
SANYO	RP3450N	R	CA09.
SANYO	M3500K		MHA5,P280
SANYO	M3500K	RG OL/OC/FM	MEA1,P365
SANYO	M2562N	RG OL/OC/FM	MEA1,P331
SANYO	M9922F	RG	CA09.
SANYO	M9709K	RG	CA09.
SANYO	M9709K	RG ST 4 BANDAS	MEA3,P124
SANYO	M9800K	SI/AM/D	CA09.
SANYO	M9802K	SI/AM/D	CA09.

**Indice de AUDIO**

SANYO	M9813K	RG ST AM-FM	MEA3,P130
SANYO	M9813K	RG ST/EC	MHA1,P191
SANYO	M9818F	RG	CA09.
SANYO	M9830K	RG ST	MHA4,P192
SANYO	RM5500BZ/M/N	RR	CA09.
SANYO	M9902F	RG	CA09.
SANYO	RP8800	R AM-FM/OC	CA09.
SANYO	M9923	RG	CA09.
SANYO	WM14983C35SS	RG ST/DD	MHA1,P188
SANYO	DC-MS1	RG,CD	CA21.01
SANYO	DC-D71	CM	CA33.06
SANYO	DC-C10	CM	CA36.02
SANYO	MCD-Z330F	RG	CA35.09
SANYO	CD-C430W	RG	CA35.02
SANYO	DC-D10/DC-D15	CM	CA39.03
SANYO	M9830K	RG	CA09.
SANYO	RP7160	R AM-FM	CA09.
SANYO	M2560N	RG OL/OC/FM	MEA1,P314
SANYO	RP6160		MHA5,P275
SANYO	RP6260		MHA5,P268
SANYO	RM6700	RR	CA09.
SANYO	RP6700		MHA5,P268
SANYO	RPM6800		MHA5,P258
SANYO	RPM6900		MHA5,P260
SANYO	M7000F	RG	CA09.
SANYO	RP8920	R AM-FM/VHF/TV	CA09.
SANYO	M7024K	MINI RG ST	MHA3,P208
SANYO	RP8880		MHA5,P386
SANYO	RP7160		MHA5,P266
SANYO	RP7260		MHA5,P267
SANYO	RP7331		MHA5,P264
SANYO	M7700F	RG	CA09.
SANYO	RP8351	R	CA09.
SANYO	M8500F	RG	CA09.
SANYO	RC8555	R AM-FM	CA09.
SANYO	RP8600SS/AS/B		MHA5,P262
SANYO	RM5500	RR	CA09.
SANYO	M7024K	RG ST 4 BANDAS	MEA3,P119
SANYO	M2562H	RG OL/OC	MEA1,P323
SANYO	C40	MC/DD/EC	MHA4,P188
SANYO	M-CD40K	RG/CD	CA09.
SANYO	RP45	R AM-FM	CA09.
SANYO	CP59	CD	CA01
SANYO	TP59	BANDEJA	CA01
SANYO	MCD-MS60F		CA22.09
SANYO	DC-DI90	CM,DD,CD	CA13.09
SANYO	GXT100	SI/AM/D/BG	CA09.
SANYO	MW242	MC ST/DD/	MHA6,P171
SANYO	MGR150	RG ST AM-FM	MEA3,P135
SANYO	C35	RG/DD/EC/CORA	MHA8,P150
SANYO	GXT155	SI/AM/D/BG/EC	CA09.
SANYO	M2422N	RG	CA09.
SANYO	MW171	MC ST,DD	CA15.05
SANYO	MW171	MC ST/DD	MHA3,P204
SANYO	MW220K	RG ST/DD	MHA2,P192
SANYO	MW220K	RG ST/DD/AM-FM	MEA3,P157
SANYO	MW225K	RG	CA09.
SANYO	MW242	MC ST/DD	MHA6,P171
SANYO	GXT150	SI/AM/D/BG/EC	CA09.
SANYO	ATR10/10N	SI/AM/D/BG	CA09.
SANYO	CD-SF3	CM	CA18.08
SANYO	JJ-F4	PS/AM-FM	MEA3,P104
SANYO	CD-SF5	CM,DD,CD	CA01
SANYO	6C10		MHA5,P257
SANYO	6S716	R	CA09.
SANYO	KBX7	SI/AM/D	CA09.
SANYO	PSP7	SI/AM/D	CA09.
SANYO	8S710N	R	CA09.
SANYO	DCX39	CM,DD	CA01
SANYO	ATR10D	DD	CA09.
SANYO	C35SS2	RG ST/DD	MHA1,P186
SANYO	C12MK II	RG	CA09.
SANYO	MW12K	RG	CA09.

**Indice de AUDIO**

SANYO	DC-D12	CA15.05	
SANYO	ATR20D	SI/AM/D/BG	CA09.
SANYO	ST20F	R AM-FM	CA09.
SANYO	DC-D30	CM,DD,CD	CA13.08
SANYO	C33	RG ST/DD/AM-FM	MEA3,P64
SANYO	C35	RG ST/DD/CO RA/EC	MHA8,P150
SANYO	GXT160	SI/AM/D/BG	CA09.
SANYO	ATR10D	CO	CA09.
SANYO	M1700H	RG OL/OC	MEA1,P225
SANYO	GCD949U	CM ST/CD/D/EC	MHA3,P196
SANYO	M1007F	RG	CA09.
SANYO	M1018	G	MHA2,P195
SANYO	RP1250	R	CA09.
SANYO	RP1250		MHA5,P271
SANYO	RP1270	R	CA09.
SANYO	RP1270	RR	MHA2,P210
SANYO	GXT255	SI/AM/EC/DD/BG	CA09.
SANYO	GXT909	CM/DD/EC	MHA4,P195
SANYO	MGR150	WM/R	MHA1,P202
SANYO	M1660F	RG	CA09.
SANYO	M1700F	RG AM-FM	MEA1,P235
SANYO	M1730F	RG	MEA3,P111
SANYO	M1730F	RG	MHA3,P207
SANYO	M24022F	RG AM-FM	MEA1,P245
SANYO	M24022H	RG OL/OC	MEA1,P253
SANYO	M2406F		MHA5,P278
SANYO	M2420H	RG	CA09.
SANYO	M2420F	RG	CA09.
SANYO	M1700F		MHA5,P276
SANYO	SXW400	PARLANTES	MEA3,P183
SANYO	M-CD300K	RG/CD	CA09.
SANYO	DXD-W400CD	CD/SI AM-FM/D	MHA2,P196
SANYO	CPM900	CD	MHA2,P211
SANYO	TPW400	BG	MEA3,P184
SANYO	MCD510K	CD	CA20.01
SANYO	MW730K	RG	CA09.
SANYO	MW737K	RG ST/DD/AM-FM	MEA3,P169
SANYO	MW737K	RG ST,DD	CA15.05
SANYO	MW737K	RG ST/DD	MHA1,P198
SANYO	FT818		MEA4,P220
SANYO	DXDW400CD	CM/CD	MEA3,P87
SANYO	MGR750R	RG ST AM-FM	MEA3,P146
SANYO	FT883M		MEA4,P223
SANYO	FT867		MEA4,P221
SANYO	GXT808	AM ST/D/DD CO RA	MHA7,P220
SANYO	GXT808	AM/DD/CORA	MHA7,P220
SANYO	MW806K	RG,DD	CA15.05
SANYO	GXT767	CM/DD	MEA3,P97
SANYO	GXT767	CM ST/DD/EC	MHA1,P194
SANYO	MGR750R	RG ST	MHA1,P204
SEIKO	7070G	RR	CA06.
SEMP-TOSHIBA	RR8100	RR AM-FM/TI/AL	CA09.
SEMP-TOSHIBA	SM4000	CM/RR/AM/BG/D	CA09.
SEMP-TOSHIBA	RR2000	RR AM-FM/TI/AL	CA09.
SEMP-TOSHIBA	RT2100	RG/MIC	CA09.
SEMP-TOSHIBA	RT2200S	RG/MIC	CA09.
SEMP-TOSHIBA	CST2500	SI AM-FM/OC/AM	CA09.
SEMP-TOSHIBA	SM3000	CM/SI/AM/D	CA09.
SEMP-TOSHIBA	SM3000	RG	CA07.
SEMP-TOSHIBA	MODULO2050	PRE/AM	CA09.
SEMP-TOSHIBA	RT6100	RG/MIC	CA09.
SEMP-TOSHIBA	RT6100/2/3	RG/MIC	CA09.
SEMP-TOSHIBA	RT6100/4	RG/MIC	CA09.
SEMP-TOSHIBA	RR7100	RR AM-FM/TI/AL	CA09.
SEMP-TOSHIBA	TM7540	SI/AM	CA09.
SEMP-TOSHIBA	TSM8000	CM/SI/AM/D/BG	CA09.
SEMP-TOSHIBA	RT8590S	RG/MIC/AUX	CA09.
SEMP-TOSHIBA	MODULO1100N	PRE/AM	CA09.
SEMP-TOSHIBA	RR1007	RR AM-FM/TI/AL	CA09.
SEMP-TOSHIBA	TMC7560	SI/AM/D	CA09.
SEMP-TOSHIBA	DDQ202	MOTOR/CONTROL	CA09.
SEMP-TOSHIBA	KS-T1	D	CA09.
SEMP-TOSHIBA	HF1100FM	R AM-FM/OC	CA09.

**Indice de AUDIO**

SEMP-TOSHIBA	CA6	SI/AM/BG/D/EC	CA09.
SEMP-TOSHIBA	CD60AD	D/AM	CA09.
SEMP-TOSHIBA	CD60AD	ADDRESS MODULE	CA09.
SEMP-TOSHIBA	PT76PLFM	R AM-FM	CA09.
SEMP-TOSHIBA	PT76PL/SL	R AM/OC	CA09.
SEMP-TOSHIBA	TR77FM	R AM-FM	CA09.
SEMP-TOSHIBA	RT110S	RG/MIC	CA09.
SEMP-TOSHIBA	CA4	SI/AM/BG/D	CA09.
SEMP-TOSHIBA	DD202	BG	CA09.
SEMP-TOSHIBA	INV65	CONVERSOR CC/AC	CA09.
SEMP-TOSHIBA	AC242FM	R AM-FM/OC	CA09.
SEMP-TOSHIBA	AC248FM	R AM-FM/OC	CA09.
SEMP-TOSHIBA	SA445	AM	CA09.
SEMP-TOSHIBA	ST445	R AM-FM	CA09.
SEMP-TOSHIBA	TR500/2	R AM/OC	CA09.
SEMP-TOSHIBA	TR900	R AM-FM/OC	CA09.
SEMP-TOSHIBA	TR950	R AM-FM/OC	CA09.
SEMP-TOSHIBA	RR1005/2	RR AM-FM/TI/AL	CA09.
SEMP-TOSHIBA	KT-S1FM	SI AM-FM	CA09.
SEMP-TOSHIBA	RR1010	RR AM-FM/TI/AL	CA09.
SEMP-TOSHIBA	SM200	CM/SI/BG/D	CA09.
SENCOR	51040		MEA4,P237
SENTINEL	369P		MHA5,P285
SHARP	RG5901B	RG	CA09.
SHARP	QT-CD50Z(BK)	CM	CA40.03
SHARP	CD-C65H/X(BK)	CM	CA40.03
SHARP	CD-C265H/X(BK)	CM	CA40.03
SHARP	CD-C570E/Z(BK)	CM	CA40.03
SHARP	CD-C/K1600Z	CM	CA40.03
SHARP	GX-R600X/XT(BK)	CM	CA40.03
SHARP	QT-CD48L(BK)	CM	CA40.03
SHARP	GF9292X	RG	CA08.02
SHARP	GF9090X	RG	CA08.
SHARP	GF6060	SI/AM/D	CA09.
SHARP	GF6000X		MHA5,P286
SHARP	GF666Z	RG	CA08.02
SHARP	GX-CD60	MC/DD/CD	CA10.01
SHARP	SG160X	RG	CA08.
SHARP	TR182		MHA5,P288
SHARP	GX-CH180X/Z(BK)	CM	CA40.03
SHARP	RG5860B	RG	CA09.
SHARP	WQ-T221Z	RG	CA08.
SHARP	WQ-T221(BK)	RG ST/DD	MHA1,P210
SHARP	WQ-T281Z	RG ST/DD	MHA1,P206
SHARP	SG1B	CM/SI/AM/D/BG	CA09.
SHARP	CD-C500Z	CD	CA23.05
SHARP	GF909	RG	CA08.
SHARP	SC1250Z	RG	CA08.
SHARP	SG320X	RG	CA08.
SHARP	LX5300	RR	CA06.
SHARP	CP1600		CA8
SHARP	GF3800X	RG	CA08.
SHARP	GF2500B	RG	CA09.
SHARP	VZ1600	CM	CA8
SICOM	RAC405/406		MEA4,P240
SICOM	PC825		MEA4,P239
SICOM	PC824		MEA4,P238
SILVANO	FK939	RG	CA36.17
SILVERTONE	9222		MHA5,P289
SOLIDYNE	3103/7	MIC.	CA08.
SOLIDYNE	3000	CONSOLA	CA08.
SONIC	TR600/700		MHA5,P290
SONORA	610		MHA5,P291
SONY	FHE959	CD/AM ST/DD/ C/CR	MHA8,P164
SONY	TC818M		CA04.15
SONY	M505	MICROCASETE	CA28.06
SONY	TR815B/Y		MHA5,P299
SONY	D802K	DM	CA03.18
SONY	FH-E838CD	CM	CA03.04
SONY	CDP-C800	CD	CA30.06
SONY	FH-B900		CA05
SONY	CDP790	CD	CA30.01
SONY	CDP770	CD	CA30.01

**Indice de AUDIO**

SONY	TR915	R AM 3 BANDAS	MEA1,P389
SONY	TFM825DL		MHA5,P301
SONY	MHC1400	HI-FI/CD/SI DI/DD	MHA7,P161
SONY	MHC3500		CA03.12
SONY	DXA-H2750	DD/AM/EC	CA03.06
SONY	TC-H2600	DD	CA27.06
SONY	MHC2600	CM	CA03.04
SONY	WM-F2081	WM	CA28.04
SONY	TA1630	AM.	CA01.01
SONY	CFS1030	RG	CA29.03
SONY	HCD-H1600	CD,EC	CA29.06
SONY	FH-B1000		CA05
SONY	HCD-H1400	CM/SI/AM/CD/DD	CA03.02
SONY	TR1300	R MULTIBANDA	MEA1,P400
SONY	CDP-C715	CD	CA30.06
SONY	MHC1200	HI-FI/CD/SI DI/DD	MHA7,P161
SONY	HCD-H1200	CM/SI/AM/CD/DD	CA03.02
SONY	HCD-H1100	CM/SI/AM/CD/DD	CA03.03
SONY	TR1000	R AM 4 BANDAS	MEA1,P393
SONY	MHC1600	CM/SI/AM/CD/DD	CA03.05
SONY	FH-E656	CM	CA03.20
SONY	LBT-D509CD		CA04.10
SONY	MDP510	CD,CDV,LD	CA28.08
SONY	ICF-C511W	RR	CA06.
SONY	CDP-C525	CD	CA30.05
SONY	XR-U550	AS	CA31.03
SONY	XR-U551RDS	AS	CA31.03
SONY	LBT-D559CD		CA04.10
SONY	CDP590		CA27.04
SONY	WM-BF605	WM	CA29.05
SONY	WM-AF605		CA29.05
SONY	TC-H3600	DD	CA27.06
SONY	TR608		MHA5,P296
SONY	TR727		MHA5,P297
SONY	CDP-C625	CD	CA30.05
SONY	CFD765	RG	CA29.04
SONY	XR-U660	AS	CA31.03
SONY	XR-U661RDS	AS	CA31.03
SONY	CDP-C700	CD	CA30.06
SONY	MHC700	CM/SI/AM/CD/DD	CA03.14
SONY	FH-B700	CM	CA03.14
SONY	MDP722GX	CD,CDV,LD	CA28.08
SONY	TR730		MHA5,P298
SONY	FH-E737CD	CM	CA03.04
SONY	CFD750	R/DD/CD	CA03.01
SONY	CDP750	CD (MANUAL USUARIO)	CA03.13
SONY	DTC690	CD	CA33.07
SONY	CFD755		CA29.04
SONY	CFD760	R/DD/CD	CA03.01
SONY	LBT-D609CD		CA04.10
SONY	CDP-X400/XE500	RCD	CA40.09
SONY	HCD-H190	CM	CA32.09
SONY	FH-B711	CM	CA34.01
SONY	HCD-H650M	CM	CA34.01
SONY	AJUSTES DE OPTICAS	PROCEDIMIENTOS	CA36.01
SONY	HST-H40	CM	CA35.06
SONY	HST-H45K	CM	CA35.06
SONY	SL-PD687	CD	CA35.05
SONY	SL-PD887	CD	CA35.05
SONY	HCD-H150	CM	CA35.04
SONY	HCD-H500	CM	CA35.04
SONY	HCD-H305	CM	CA35.04
SONY	FH-CX35	CM	CA35.04
SONY	SL-PG440	CD	CA35.03
SONY	HCD170	CM	CA34.06
SONY	DM8801	DISK	CA4012
SONY	CDP-C312M		CA05
SONY	CFD460	CD	CA33.09
SONY	CFD-Z130	CD	CA33.09
SONY	CFD-Z120	CD	CA33.09
SONY	CFD-Z110	CD	CA33.09
SONY	HCD-H501	CM	CA35.01
SONY	DM8804	DISK	CA40.12



**Indice de AUDIO**

SONY	D-190/191/191SR/192CK/193	CM	CA40.08
SONY	XR-3750/C350	AUTOESTEREO	CA41.04
SONY	HCD-G202	CM	CA41.01
SONY	HCD-C20	CM	CA41.01
SONY	HCD-XB8K	CM	CA40.04
SONY	HCD-D670AV/N555AV	CM	CA40.04
SONY	CDP17F	CM	CA24.04
SONY	CDP-880	DISK	CA40.12
SONY	XR5050	AS	CA31.02
SONY	CDP-S27	CD	CA30.04
SONY	XR6033SW		CA31.04
SONY	XR5550	AS	CA31.02
SONY	XR5508	AS	CA31.01
SONY	XR5450	AS	CA31.02
SONY	CFS-W7010S		CA04.13
SONY	XR5051	AS	CA31.02
SONY	XR7050	AS	CA31.01
SONY	XR4057	AS	CA31.02
SONY	XR4050	AS	CA31.03
SONY	XR4050	AS	CA31.02
SONY	XR4040	AS	CA31.03
SONY	CDP-H3750	CD/SI	CA03.07
SONY	CDP-H3600		CA27.05
SONY	XR5052	AS	CA31.02
SONY	FH-B700	CM	CA34.07
SONY	MHC3600	CM	CA03.04
SONY	HCD-H71M	CM	CA34.06
SONY	D121	DM	CA34.04
SONY	RX70	CM	CA34.04
SONY	GR7J	CM	CA34.04
SONY	CFS-W7000S	RG	CA08.
SONY	CFD560	CM	CA34.07
SONY	LBT-D505CD		CA05
SONY	HCD-H61M	CM	CA34.07
SONY	CDX-V8000		CA27.07
SONY	XR7180	AS	CA31.01
SONY	TR7170		MHA5,P300
SONY	XR7082	AS	CA31.01
SONY	XR7080	AS	CA31.01
SONY	HCD-D60	CM	CA34.04
SONY	HCD-H50	CM/SI/AM/CD/DD	CA03.03
SONY	MXK33	KARAOKE MIXER	CA29.01
SONY	TR63		MHA5,P292
SONY	HCD-C70		CA03.21
SONY	LBT-A60CD/CDM	CD/SI DI/DD/CO RA	MHA7,P182
SONY	LBT-A57CDM		CA04.10
SONY	HCD-H55	CM/SI/AM/CD/DD	CA03.03
SONY	HCD66	DM	CA04.08
SONY	HCD-H51K		CA04.11
SONY	HCD-H66	CM/SI/AM/CD/DD	CA03.02
SONY	CDP-M44	CM/SI/AM/CD/DD	CA03.20
SONY	WM-FX43		CA18.03
SONY	CDP-S42		CA24.09
SONY	CDP-M42	CD	MHA8,P158
SONY	CDP-S37	CD	CA28.07
SONY	CDP-C87ES	CD	CA30.06
SONY	CDX-A55	MULTI-CD	CA31.05
SONY	CDX-R77	AS	CA31.01
SONY	TR86		MHA5,P294
SONY	TR84		MHA5,P293
SONY	CDP-C79ES	CD	CA30.06
SONY	CDP-M79	CD	CA30.03
SONY	CDP-M78	CD	CA30.03
SONY	HCD-H77	CM/SI/AM/CD/DD	CA03.02
SONY	FH-B66CD	HI-FI/CD/SI DI/DD	MHA7,P161
SONY	CDP-C77ES	CD	CA30.06
SONY	D33	DM	CA04.08
SONY	TCK75		CA18.01
SONY	MHC-C70		CA04.12
SONY	CDP-C313M		CA05
SONY	DXA-C70		CA04.12

**Indice de AUDIO**

SONY	B70CD	HI-FI/CD/SI DI/DD	MHA7,P161
SONY	LBT-A67CDM		CA04.10
SONY	B77CD	HI-FI/CD/SI DI/DD	MHA7,P161
SONY	FH-C7X		CA04.12
SONY	CDP-M34 /44	CM,CD	CA03.20
SONY	CDX-J10	MULTI-CD	CA31.05
SONY	CDP-C10	CD	CA30.02
SONY	CDX-A10	MULTI-CD	CA31.05
SONY	XT10	MULTI-CD	CA31.05
SONY	HCD-GR8		CA24.04
SONY	TC10		MEA4,P241
SONY	CDP-C8ESD	CD	CA30.06
SONY	CDP11S	CD	CA30.03
SONY	MDR-IF5K	AURIC.INALAM.	CA28.05
SONY	HCD-H5		CA24.04
SONY	FH-B5CD		CA24.04
SONY	MZ1	MINIDISK	CA27.03
SONY	LBT-D505M		CA05
SONY	CDP-K1	CD	CA30.03
SONY	XO-D8CD	CM	CA30.07
SONY	WM-BF23	WM	CA28.01
SONY	XR-A33		CA31.04
SONY	CDP-M31	CD	CA30.01
SONY	CFS-D30S	CM	CA03.08
SONY	AC-V30	CARGADOR CAMARA	CA28.02
SONY	CDX-A30	MULTI-CD	CA31.05
SONY	WM-AF29	WM	CA28.01
SONY	FH10W	RG/DD	CA03.19
SONY	XR24	AS	CA31.04
SONY	CDP-M75	CD (MANUAL USUARIO)	CA03.13
SONY	WM-AF23	WM	CA28.01
SONY	WM-FX22	WM	CA04.09
SONY	WM-FX21	WM	CA04.09
SONY	HCD-A17		CA24.04
SONY	LBT-A15CD	HI-FI/CD C/CR	MHA6,P174
SONY	D11	DM	CA03.15
SONY	XRS24	AS	CA31.04
SONY	CDP-C301M	CD	CA30.05
SONY	XRS330SW		CA31.04
SONY	MDP322	GX	CA29.02
SONY	CDP-C322M	CD	MHA8,P216
SONY	CDP-C315M		CA05
SONY	CDP-C315M	CD	CA04.07
SONY	CDP-C313M	CD	CA04.07
SONY	CDP-C312M	CD	MHA7,P178
SONY	D311	DM	CA03.17
SONY	TR88		MHA5,P295
SONY	CDP-C305M	CD	CA30.05
SONY	CDP390	CD	CA30.04
SONY	TA-H300		CA03.09
SONY	CDP-H300		CA03.10
SONY	CDP-H300	CD	CA28.03
SONY	XR300	AS	CA31.03
SONY	CDX-U300RF	MULTI-CD	CA31.05
SONY	CDP295	CD	CA04.06
SONY	CDP270		CA04.14
SONY	HCD-H70	CM/SI/AM/CD/DD	CA03.02
SONY	XR230		CA31.04
SONY	CDP-C311M		CA05
SONY	CF420S	RG OL/OC/FM	MEA1,P375
SONY	LBT-D505CDM		CA05
SONY	XR502	AS	CA31.03
SONY	TC-H500		CA3.11
SONY	CDP-C500	CD CARROUSEL/C C/CR	MHA6,P205
SONY	XR500	AS	CA31.03
SONY	CDP497	CD	CA30.01
SONY	LBT-A495		CA05
SONY	CDP491	CD	CA04.06
SONY	CDP470		CA04.14
SONY	MDP333	CD/CDV	CV27.08
SONY	CDP-C425	CD	CA30.05
SONY	MDP355GX	CD/CDV	CA27.08
SONY	HST414	CM ST/CD/DD	CA08.07

**Indice de AUDIO**

SONY	FH411R		CA05
SONY	M405	MICROCASETE	CA28.06
SONY	CDP-C401	CD CARROUSEL/C C/CR	MHA6,P205
SONY	CDP-C400	CD CARROUSEL/C C/CR	MHA6,P205
SONY	ES-P400	AS	CA31.02
SONY	ES-R400	AS	CA31.02
SONY	CDP395	CD	CA30.01
SONY	CDP-C221	CD	CA03.16
SONY	MDP455GX	CD,CDV,LD	CA29.07
SONY	CDP-C100	CD	CA30.02
SONY	XR231		CA31.04
SONY	MDP210	CD	CA29.02
SONY	FH-B177	(MAN.USO)	CA03.14
SONY	FH-B170	CM/SI/AM/CD/DD	CA03.14
SONY	TFM117WA	R OL/OC/FM	MEA1,P382
SONY	LBT-D115CD	HI-FI/CD C/CR	MHA6,P192
SONY	LBT-D115CD		CA05
SONY	XO-D101S	CM	CA30.07
SONY	CDP-M97	CD	CA30.03
SONY	HCD-RX90		CA24.04
SONY	HCD-C90		CA03.21
SONY	CDP203S	CD	CA30.04
SONY	CDP209ES	CD	CA30.01
SONY	CDP-S107	CD	CA30.04
SONY	CDP205ESC	CD	CA30.04
SONY	CDP190	CD	CA30.04
SONY	XO-D201	CM	CA30.07
SONY	TA-H200		CA03.09
SONY	CDP195	CD	CA04.06
SONY	CDP-C89ES	CD	CA30.06
SONY	XE90MKII	EC	CA31.06
SONY	FH-B190	CM/SI/AM/CD/DD	CA03.14
SONY	CDP-S207	CD	CA28.07
SOUNDLITE	CR765		MEA4,P243
SPATIAL	508	RG	CA07.
SPICA	4TR		MHA5,P302
SPICA	ST600	R	CA06.
SPICA	ST600		MHA5,P303
STANDARD	SRG204		MHA5,P306
STANDARD	SR-G34		MHA5,P305
STANDARD	SRF22		MHA5,P304
SUPERMINI	CS901		MEA4,P244
SYLVANIA	7K10/11		MHA5,P307
TAIWAN			MEA4,P245
TARGA	R680	AS	CA25.07
TARGA	Q838	AS	CA25.07
TARGA	T812	AS	CA25.07
TARGA	Q745	AS	CA25.07
TARGA	Q715A	AS	CA25.07
TARGA	Q705A	AS	CA25.07
TARGA	Q615	AS	CA25.07
TARGA	R190A	AS	CA25.07
TARGA	Q710		CA25.07
TEAC	CD-P1120	RCD	CA39.07
TECHNICS	SE-CH530/SL-CH530	CM	CA40.05
TECHNICS	ST-K50	SI,DI S/REM	CA16.22
TECHNICS	RS-M260	DECK	CA35.10
TECHNICS	SU8077K	AMPLIF	CA33.01
TECHNICS	RS-M280	D	CA13.03
TECHNICS	SH-E51	EC	CA16.13
TECHNICS	SU-VX920	AM	CA16.17
TECHNICS	SH-CH750	DD(CM)	CA16.10
TECHNICS	SA-CH750	SI,AM(CM)	CA16.09
TECHNICS	SU-CH700		CA16.30
TECHNICS	SL-CH555	CM	CA24.07
TECHNICS	RS-TR535	MANUAL USUARIO	CA04
TECHNICS	RS-TR515	DD	CA16.14
TECHNICS	RS-TR515	MANUAL USUARIO	CA04
TECHNICS	SV-X502	AM	CA16.19
TECHNICS	SA-CH455	CM	CA24.06
TECHNICS	SA-CH950	(CM),SI,AM	CA16.12
TECHNICS	ST-X302L	SI,DI	CA16.15
TECHNICS	SH-CH950	(CM),DD	CA16.11

**Indice de AUDIO**

TECHNICS	RS-M225	D	CA13.05
TECHNICS	RS-M215	D	CA13.02
TECHNICS	SH-E85	EC	CA16.20
TECHNICS	SH-GE70	EC	CA16.16
TECHNICS	SV-G50	AM	CA16.18
TECHNICS	ST-K50A	SI,DI,S/REM	CA16.21
TECHNICS	RS-X33W	D/CR	MHA3,P211
TECHNICS	SL-PC25	CD	CA27.02
TECHNICS	SA-C7K	MC/SI/EC	MHA4,P198
TECHNICS	SL-P2	CD CARROUSEL/C C/CR	MHA6,P214
TECHNICS	TEORIA DE CD	CD	CA04.
TECHNICS	RS-TR313	DD	CA25.05
TECHNICS	SL1200MK2	TD	MHA3,P216
TECHNICS	RS-CH950	CM,DD,CD	CA16.08
TELEFUNKEN	HP202	MC ST/DD	MHA1,P218
TELEFUNKEN	NDE8000	AS	CA2
TELEFUNKEN	4822		MHA5,P308
TELEFUNKEN	RC1720	RG ST/DD	MHA3,P218
TELEFUNKEN	725		MHA5,P308
TELEFUNKEN	TK-N140	CM	CA40.06
TELEFUNKEN	15661		MHA5,P308
TELEFUNKEN	HP101	MC ST	MHA2,P214
TELEFUNKEN	RK70	RG	CA09.12
TELEFUNKEN	TK-W40		CA25.06
TELEFUNKEN	PCR33	RG ST/DD	MHA1,P216
TELEFUNKEN	TR2		MHA5,P310
TELEFUNKEN	TKC40	CM	CA33.05
TELEFUNKEN	HP202	MC ST/DD	CA09
TEMPEST	CP15		MEA4,P246
TEN	KT200		MHA5,P311
TKR	150M	AS	CA09.
TKR	CRF210M	AS	CA09.
TKR	CRF800M	AS	CA09.
TONOMAC	JUNIOR A5878		MHA5,P317
TONOMAC	NN	RG	CA09.12
TONOMAC	SUPER PLATIN68		MHA5,P324
TONOMAC	SP320N	RG AM-FM	MEA1,P411
TONOMAC	RC523	RG AM-FM	MEA1,P409
TONOMAC	ST729	RG ST AM-FM	MEA1,P412
TONOMAC	RC825	RG AM-FM	MEA1,P410
TONOMAC	PLATINO A5868		MHA5,P312
TONOMAC	LARK II A5877		MHA5,P320
TOPECO	SALVA PESOS	(9V)	MHA5,P334
TOPECO	59226		MHA5,P342
TOPECO	59325		MHA5,P346
TOPECO	59324		MHA5,P345
TOPECO	59323		MHA5,P346
TOPECO	59322		MHA5,P345
TOPECO	59237		MHA5,P343
TOPECO	59225		MHA5,P341
TOPECO	59214		MHA5,P342
TOPECO	59213		MHA5,P341
TOPECO	59211		MHA5,P340
TOPECO	59489	R	CA06.
TOPECO	59204		MHA5,P338
TOPECO	59191		MHA5,P337
TOPECO	59188		MHA5,P336
TOPECO	59181		MHA5,P335
TOPECO	SALVA PESOS	(3V/4,5V/6V)	MHA5,P333
TOPECO	59208		MHA5,P339
TOPECO	59280		MHA5,P344
TOSHIBA	SM200/2	CM/SI/AM/D/BG	CA09.
TOSHIBA	SB230	AM ST	MHA8,P222
TOSHIBA	CT412		MEA4,P247
TOSHIBA	TR555	R AM-FM	CA09.
TOSHIBA	RP700SH	R	MHA4,P220
TOSHIBA	SRT-S777AMBASSADOR	CM ST	MHA1,P220
TOSHIBA	CT800		MEA4,P248
TOSHIBA	CT812C		MEA4,P249
TOSHIBA	RT-S913	RG ST	MHA6,P212
TOSHIBA	SL3127	CM ST/DD	MHA2,P220
TOSHIBA	RT3100	RG	CA09.
TOSHIBA	KT1000	G MINI PA/PERIODISTA	MHA7,P224

**Indice de AUDIO**

TOSHIBA	SM150	CM/SI/AM/D/BG	CA09.
TOSHIBA	SK-D1L	RG ST	MHA8,P153
TOSHIBA	TR950DX	R AM-FM	CA09.
TOSHIBA	RT6100/5	RG	CA09.
TOSHIBA	SD5109	DVD	CDR06
TOSHIBA	SD2200	DVD	CDR06
TOSHIBA	SD1200	DVD	CDR06
TOSHIBA	SD9100	DVD	CDR06
TOSHIBA	SK-D1	RG ST	MHA8,P153
TOSHIBA	7TR203		MHA5,P348
TOSHIBA	6TR186		MHA5,P347
TOSHIBA	RT110S II	RG	CA09.
TOSHIBA	SB-A10	AM ST	MHA7,P222
TOSHIBA	SY-C15	PRE/AM ST	MHA4,P222
TOSHIBA	RT-WX37	RG ST/DD	MHA1,P213
TOSHIBA	ST-S45	SI	MHA4,P216
TOSHIBA	RT-SX57	RG	CA09.
TOSHIBA	RT100S	RG ST	MHA4,P218
TOSHIBA	RC7000F/SA/FE	RR	MHA4,P224
TOSHIBA	RR7100/2	RR	CA09.
TOSHIBA	SL3147	SI/AM/D	CA09.
TRADELEC	TA7608		MEA2,P151
TRAV-LER	TR280		MHA5,P349
TRAV-LER	TR281		MHA5,P349
TRAV-LER	TR282		MHA5,P349
TRAV-LER	TR283		MHA5,P349
UCOA	INFO TRAFOS	TRAFOS DE AUDIO	CA08.
UCOA	JUNIOR		MHA5,P351
UCOA	MASTER		MHA5,P352
UCOA	SENIOR		MHA5,P353
UCOA	25T		MHA5,350
ULTRASONIC	TR15/83		MHA5,P362
ULTRASONIC	TR11		MHA5,P359
ULTRASONIC	(TR6)2500		MHA5,P360
ULTRASONIC	TR8		MHA5,P361
ULTRASONIC	TR9		MHA5,P358
ULTRASONIC	TR10		MHA5,P357
UNICEF	TU75		MHA5,P354
UNICEF	TU2500FS		MHA5,P355
UNICEF	TU2500FL		MHA5,P354
UNICEF	TU2500SS		MHA5,P356
VICTOR	TS600		MHA5,P363
VISA	TRQ117	G	CA05.
VOXSON	GN108		MEA4,P250
WESTERN AUTO	DC3085C		MHA5,P364
WESTINGHOUSE	7		MHA5,P365
WESTINGHOUSE	HP685P8		MHA5,P366
WESTINGHOUSE	HP686P8		MHA5,P366
WINCO	700	=SAMSUNG RCD 990	CA10.05
WINCO	BANDEJAMEDIDAS	BG	CA08.
YAMAHA	CR620	SI	CA01.04
YASUI	LX5300	RR	CA.09
ZENITH	ROYAL300F/R/Y		MHA5,P369
ZENITH	ROYAL100		MHA5,368
ZENITH	D7000/1	R AM-FM/LW/SW/WB	CA06.
ZENITH	ROYAL1000	R 4 BANDS	CA06.
ZENITH	ROYAL1000D		MHA5,P372
ZENITH	ROYAL700L		MHA5,P375
ZENITH	ROYAL500RD/WD/YD		MHA5,P371
ZENITH	ROYAL475		MHA5,P370
ZENITH	ROYAL E76		MHA5,P378
ZENITH	E441		MHA5,P384
ZENITH	Q1	RG ST/EC	MHA2,P216
ZENITH	ROYAL E71		MHA5,P389
ZENITH	ROYAL70		MHA5,P380
ZENITH	ROYAL50		MHA5,P367
ZENITH	ROYAL E26		MHA5,P376
ZENITH	ROYAL E20		MHA5,P382
ZENITH	P7-2	CM	MHA3,P220
ZENITH	E445	R AM-FM/AM	CA06.